

DISMANTLING INFORMATION for USE by PROFESSIONAL RECYCLERS

ORIGINAL MANUAL ISSUE DATE: 2026.06

Model:

K-65XR95M2 K-75XR95M2 K-85XR95M2 K-115XR95M2

9-888-940-42

LCD TV

SONY®

Sony EMCS (Malaysia) Sdn. Bhd. HES-M

© 2026

Conditions of Use:

- (1) Please use this information only for the purpose of performing repair and recycling Sony products. Using this information for any purpose other than the purpose described foregoing is forbidden.
- (2) Do not copy, replicate, reproduce, alter, translate, transmit, sell, lease, or distribute this information in whole or in part without the prior written permission of the author.

Revision of Information:

This information may be changed or updated at any time without any prior notice. Please confirm that this information is up-to-date before using it.

MODEL LIST & REMOTE CONTROL

MODEL	REMOTE	DESTINATION	RMF-TX940E	RMT-TX450E
K-65XR95M2	RMF-TX940E RMT-TX450E	CEI, UKA		
K-75XR95M2	RMF-TX940E RMT-TX450E	CEI, UKA		
K-85XR95M2	RMF-TX940E RMT-TX450E	CEI, UKA		
K-115XR95M2	RMF-TX940E RMT-TX450E	CEI, UKA		

TOOLS & EQUIPEMENTS

1. LIST ITEM TO PREPARE



- i. Screwdriver (e.g., #2 Phillips Screwdriver).
- ii. Multimeter.
- iii. ESD Wrist Straps.
- iv. Metal Washer (Flat) or Coin - to remove Rear Cover.

Thickness: approx. 1.5 mm
Diameter: 20~25 mm (wrap in tape (L=50 mm))

- v. Ruler - to remove Rear Cover.

Plastic or Metal Ruler (In case of Metal ruler, wrap in tape (L=50 mm) for prevent scratches)

- vi. Service Manual.

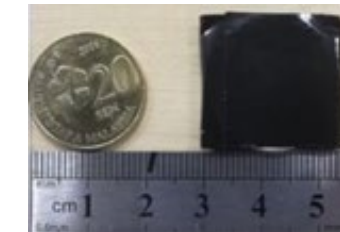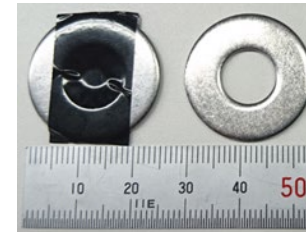

2. OPTIONAL EQUIPMENTS

- i. Screwdriver (e.g., #0 Phillips Screwdriver).
- ii. Parts Tray for loose screws and small items.
- iii. Flashlight.



For Surface Mounted Parts / Connector.

Hot-Air type soldering iron is needed.

DISASSEMBLY & REMOVAL CAUTION 65" / 75" / 85"

REAR COVER

1) Remove Stand Front or Back Cover.


① Rotate Back Cover to remove it.

② Push the cover from the back to remove it

①



②

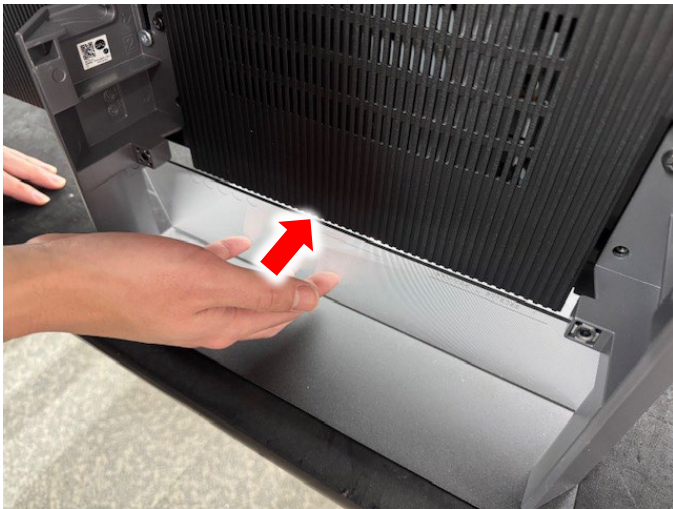


2) Remove screw from Rear Cover.

○ Vesa Screw.

○ AC Screw.

	Vesa	AC	Total screws
65"	4 pcs	1 pc	5 pcs
75"	4 pcs	1 pc	5 pcs
85"	4 pcs	1 pc	5 pcs

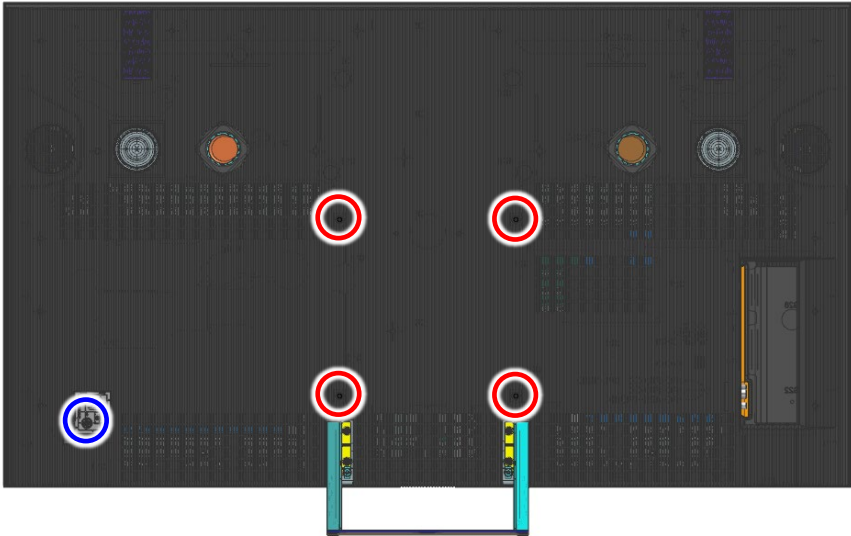

DISASSEMBLY & REMOVAL CAUTION 65" / 75" / 85"


REAR COVER

3) Remove AC Cover & Power Supply Cord.


- ① Remove AC Cover.
- ② Remove Power Supply Cord.

 Disconnect from G-board.
 Remove power supply cord.

①



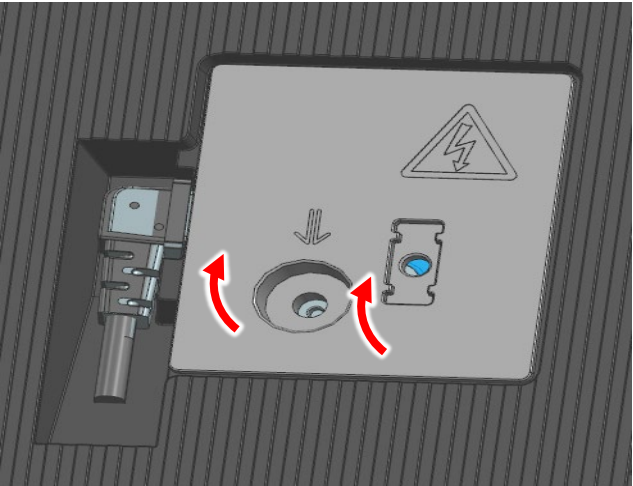


②

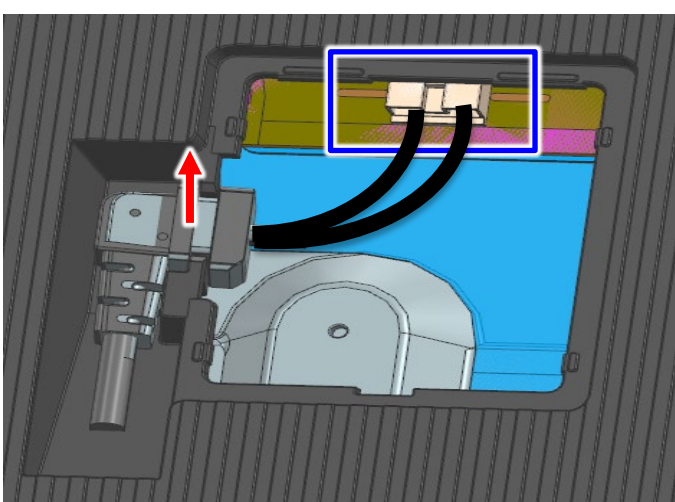

4) Remove card (Only Card Slot Type).

 Remove Card.

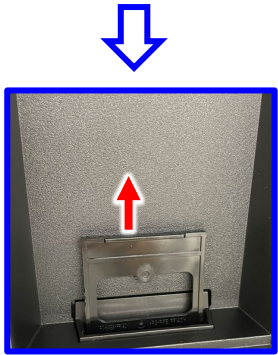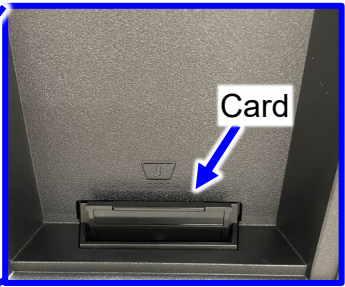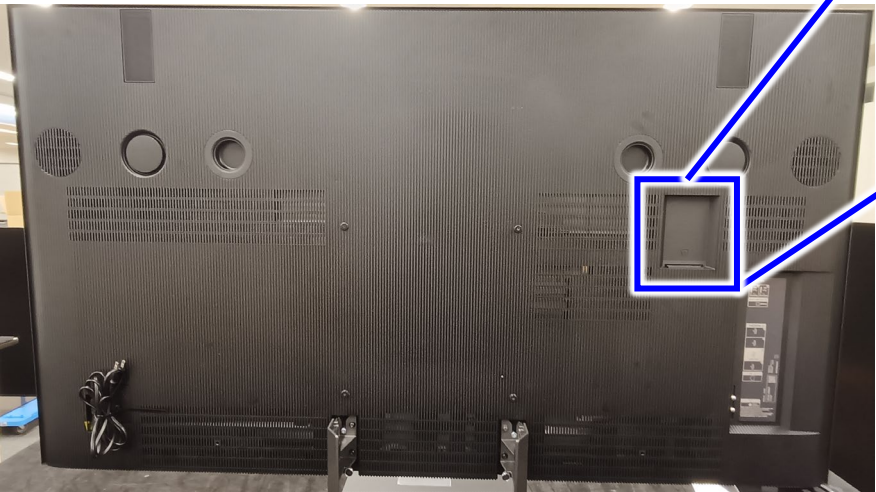


DISASSEMBLY & REMOVAL CAUTION 65" / 75" / 85"

REAR COVER


5) Unhook bottom hooks.

65"

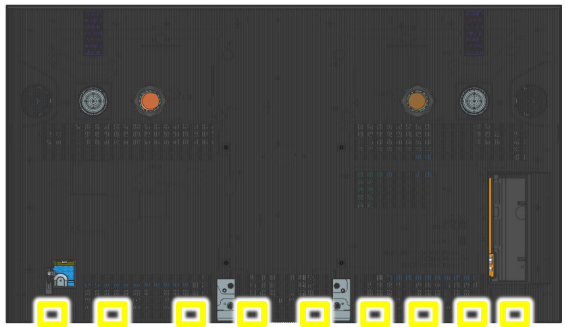


<1> <2>

75"

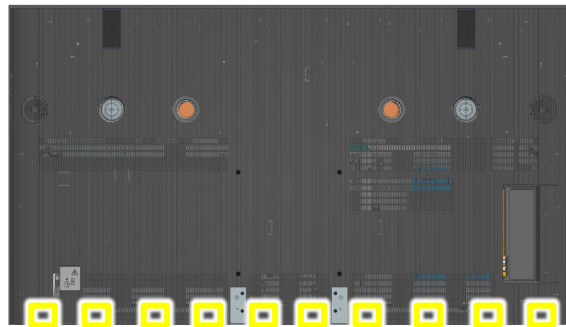

<1> <2>

85"

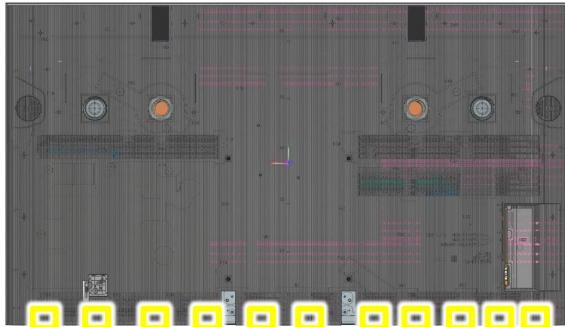

<1> <2>



DISASSEMBLY & REMOVAL CAUTION 65" / 75" / 85"

REAR COVER

6) Unhook bottom hooks.



- ① Use washer or coin or something similar JIG to unhook bottom Rear Cover-Bezel hook.
- ② Wrap washer or coin in tape (55 mm x 25 mm).
- ③ Thickness of coin approximately 2 mm
(Refer to the next page for the location of hooks).
- ④ Can use mirror or feel the rib to assist locating the hook position.

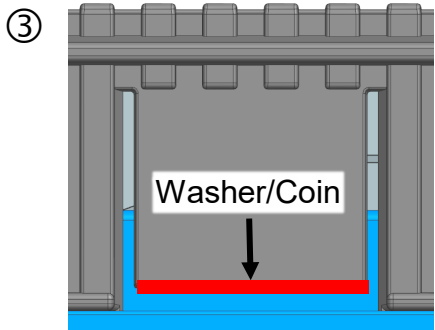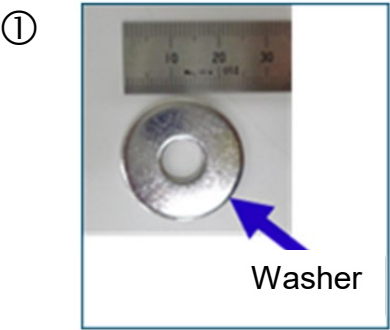

DISASSEMBLY & REMOVAL CAUTION 65" / 75" / 85"

REAR COVER


6) Unhook bottom hooks.



DISASSEMBLY & REMOVAL CAUTION 65" / 75" / 85"

REAR COVER

7) Unhook left side hook.

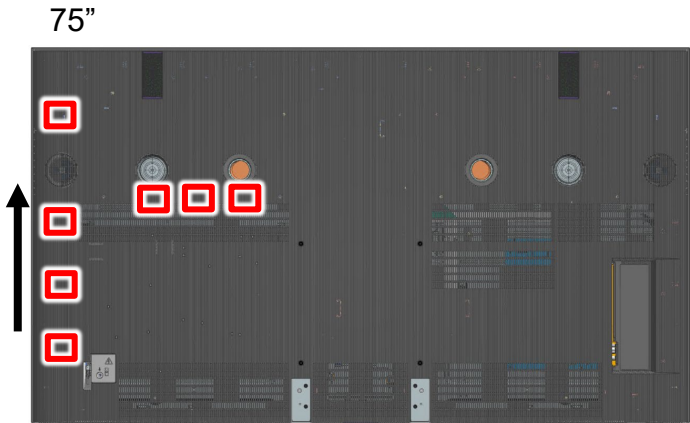


DISASSEMBLY & REMOVAL CAUTION 65" / 75" / 85"

REAR COVER


7) Unhook lower left hook .

① Hold area. 

② Pull the Rear Cover to unlock lower left hook. 

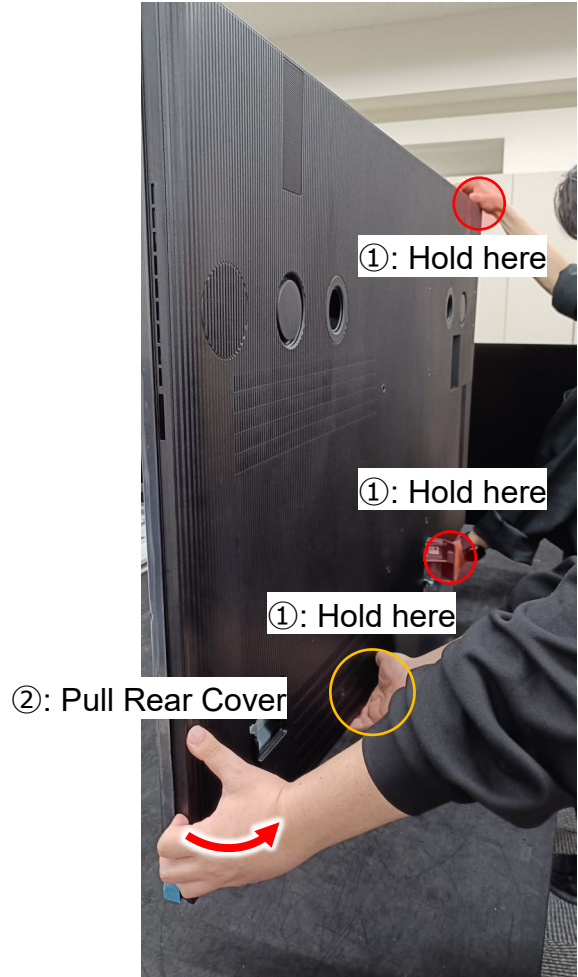

Note: This work requires two people.

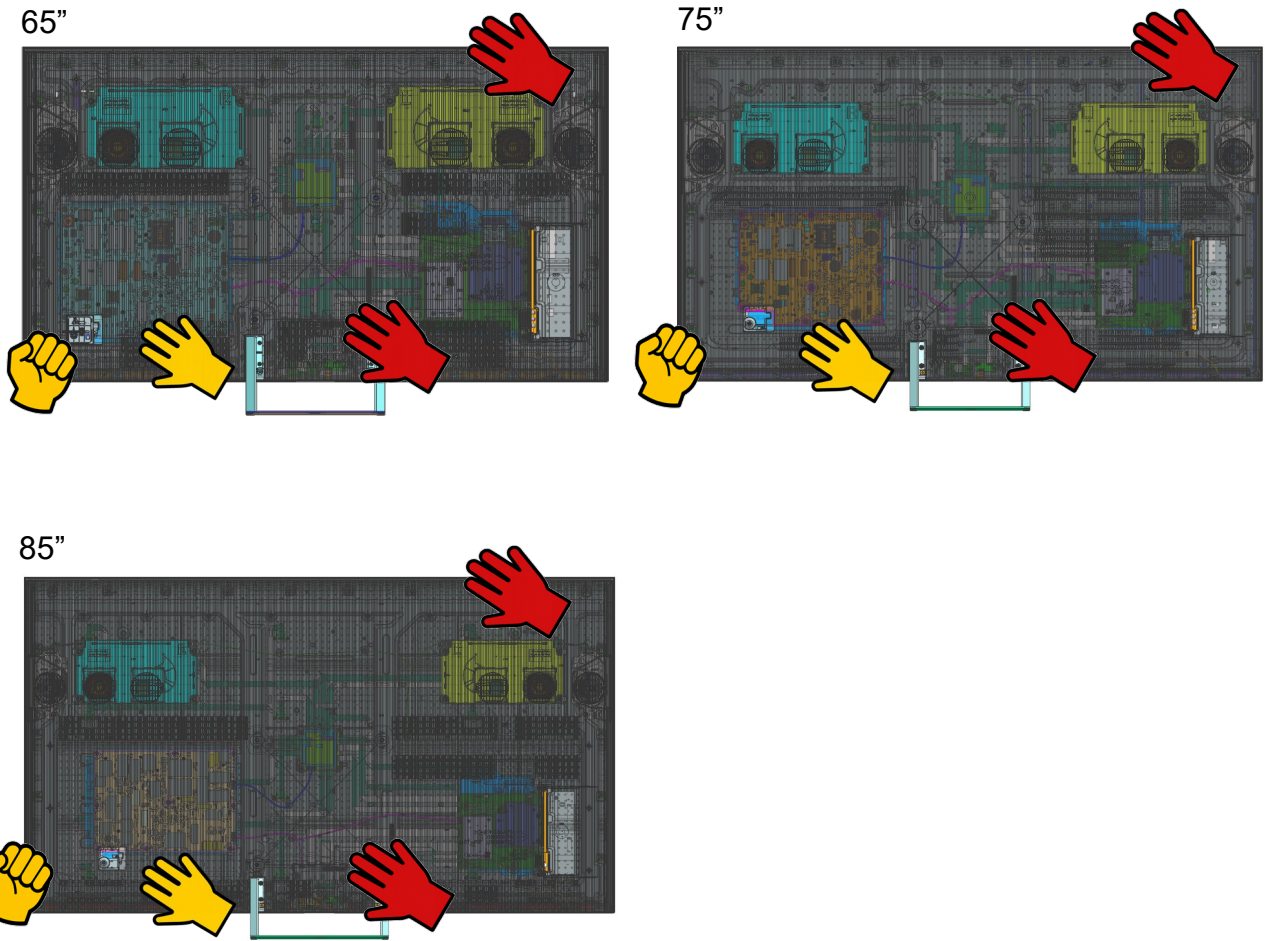


DISASSEMBLY & REMOVAL CAUTION 65" / 75" / 85"


REAR COVER

8) Unhook right side hook.


65"

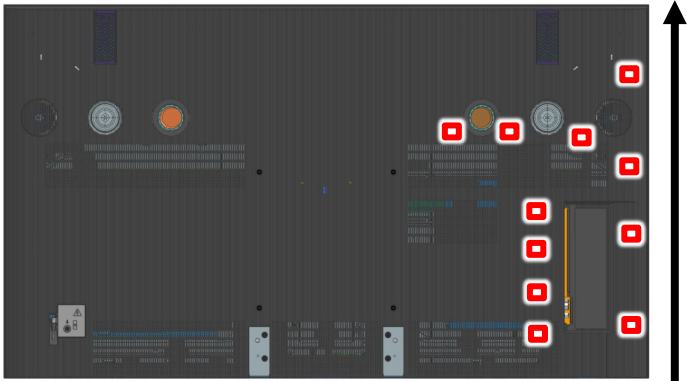

75"

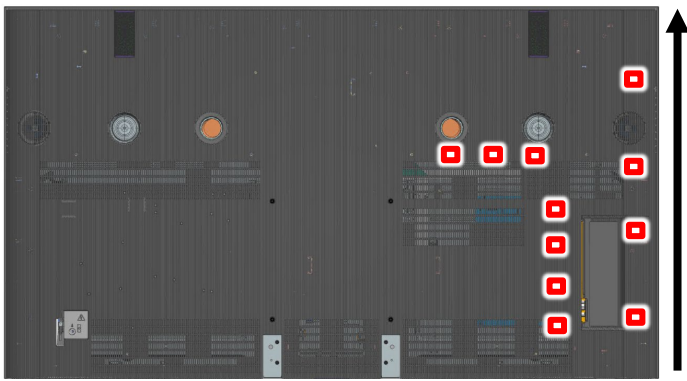

85"

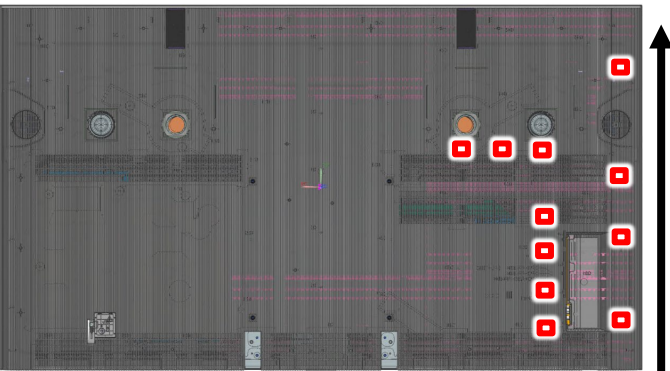


DISASSEMBLY & REMOVAL CAUTION 65" / 75" / 85"

REAR COVER




8) Unhook lower right hook.

① Hold area. 

② Pull the Rear Cover to unlock lower right hook. 

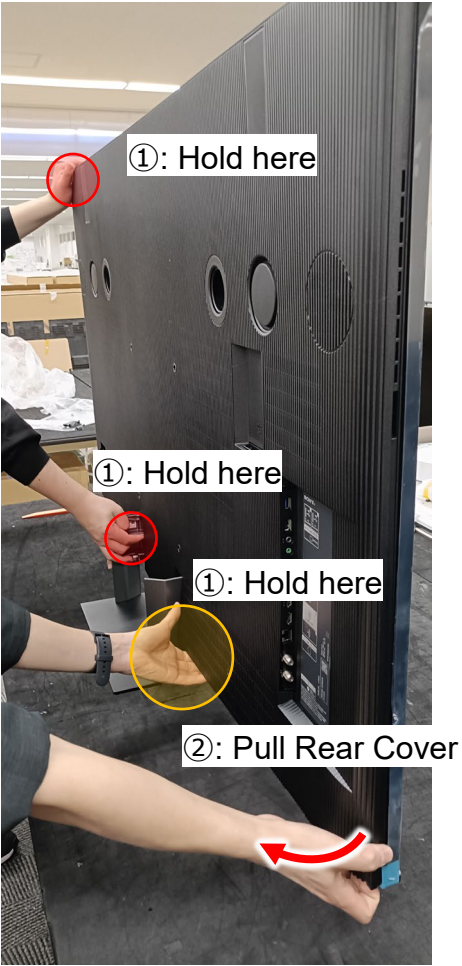

Note: This work requires two people.

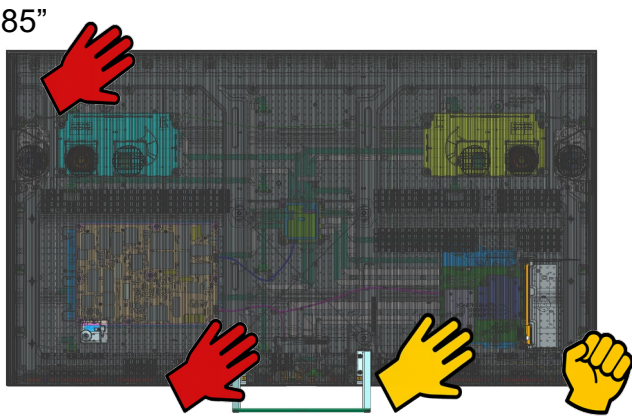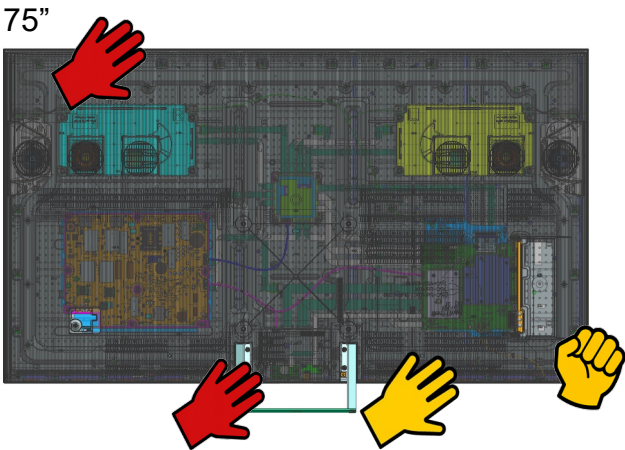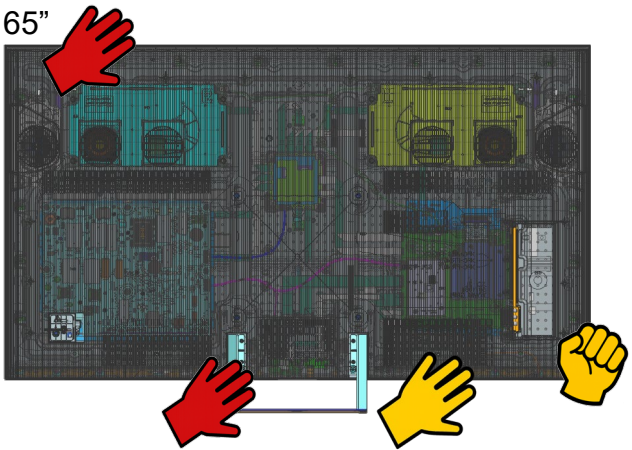


DISASSEMBLY & REMOVAL CAUTION 65" / 75" / 85"


REAR COVER

9) Unhook Top corner hooks.


65"

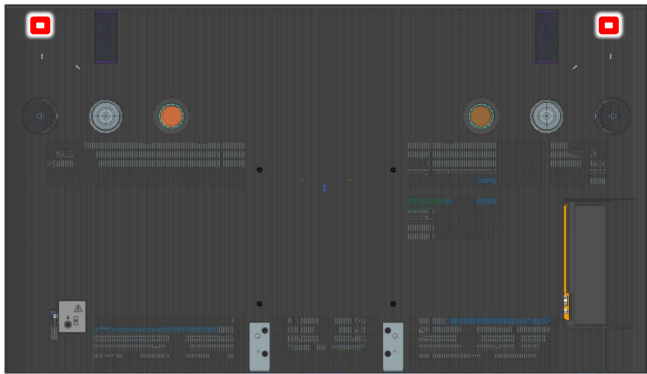

75"

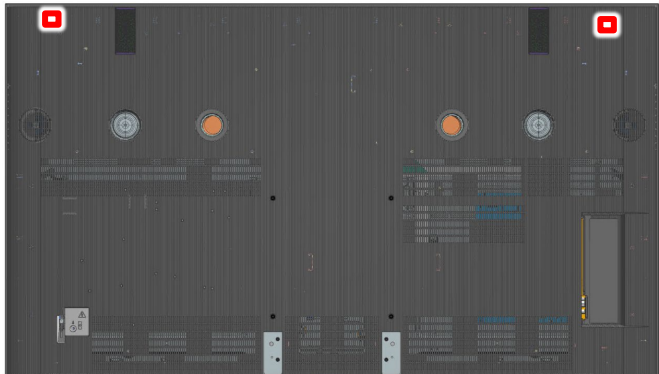

85"

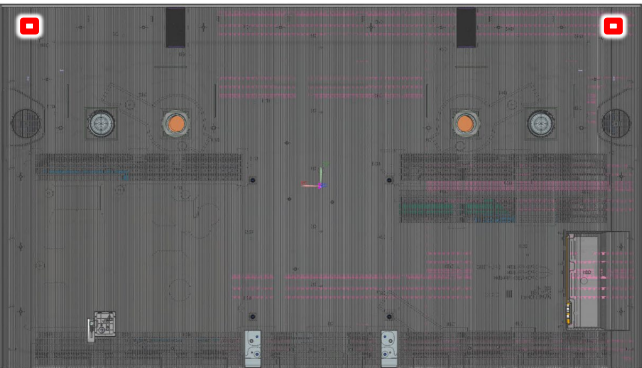


DISASSEMBLY & REMOVAL CAUTION 65" / 75" / 85"

REAR COVER




9) Unhook Top corner hooks. Left Top corner.

① Hold area.  

② Pull the Rear Cover to unlock lower left hook. 

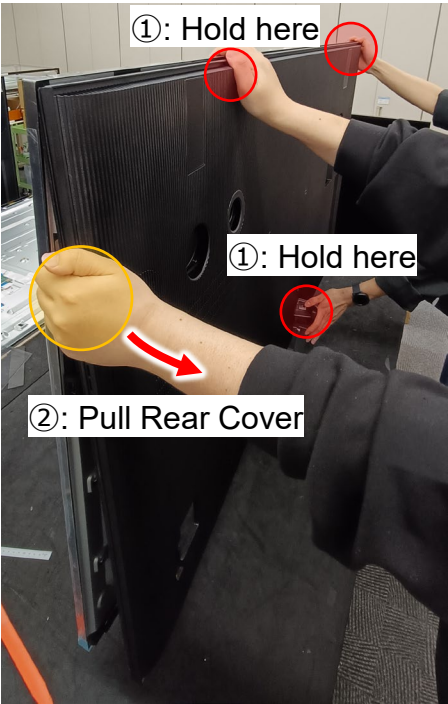

Note: This work requires two people.

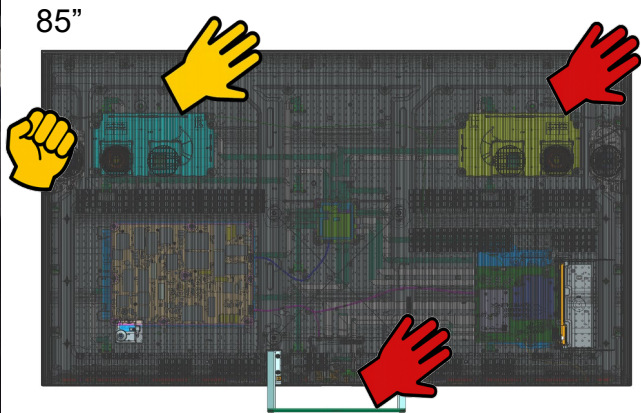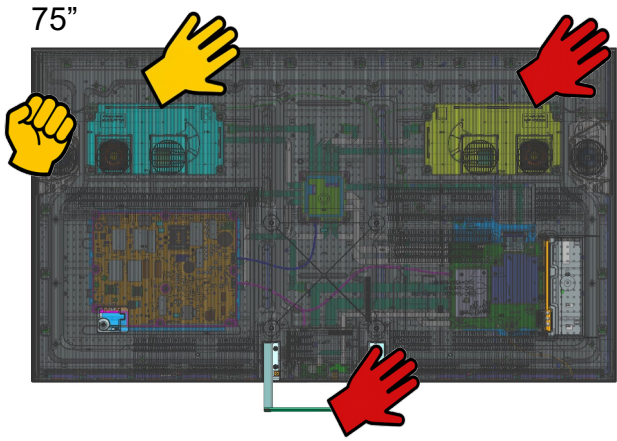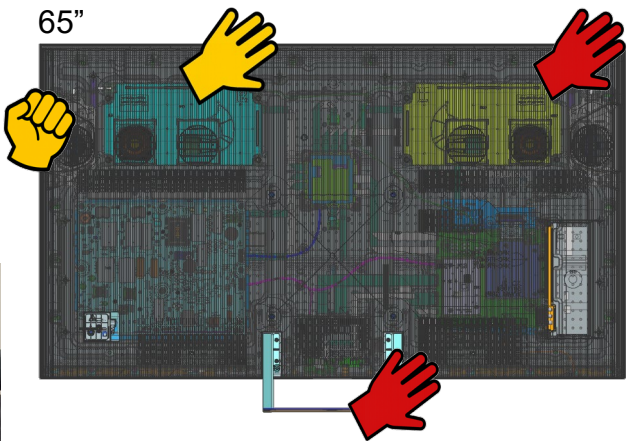


DISASSEMBLY & REMOVAL CAUTION 65" / 75" / 85"




REAR COVER

9) Unhook Top corner hooks. Right Top corner.

- ① Hold area.  
- ② Pull the Rear Cover to unlock lower right hook. 

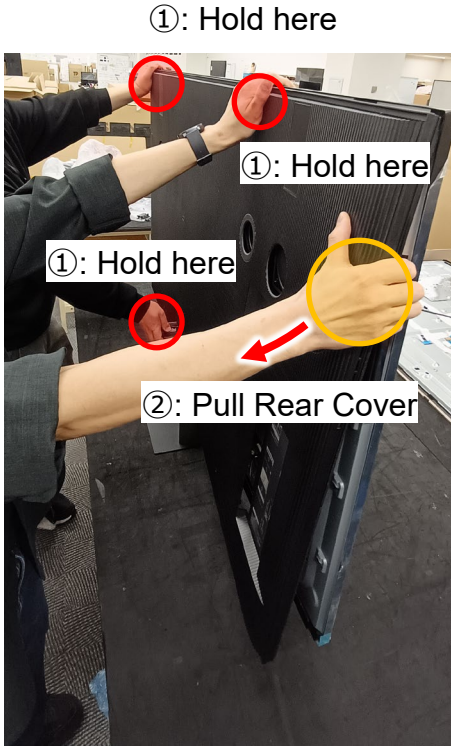




Note: This work requires two people.

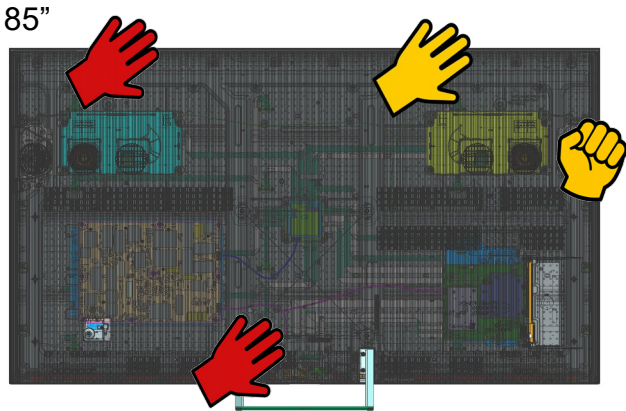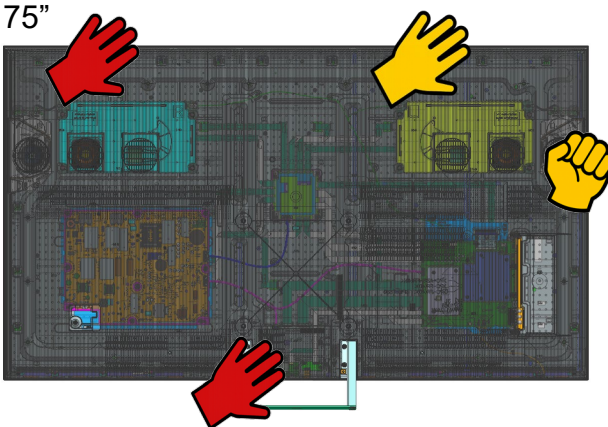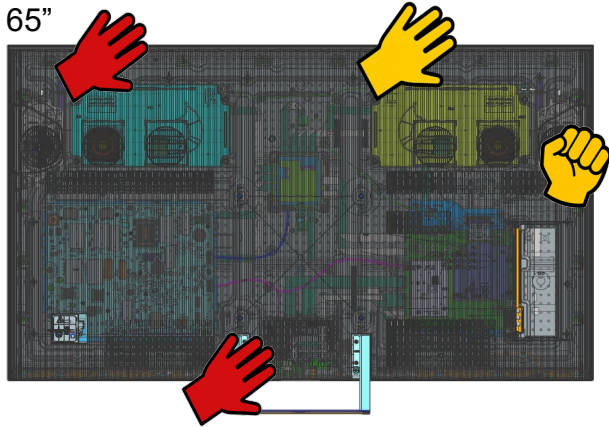

DISASSEMBLY & REMOVAL CAUTION 65" / 75" / 85"

REAR COVER


9) Unhook Top corner hooks.

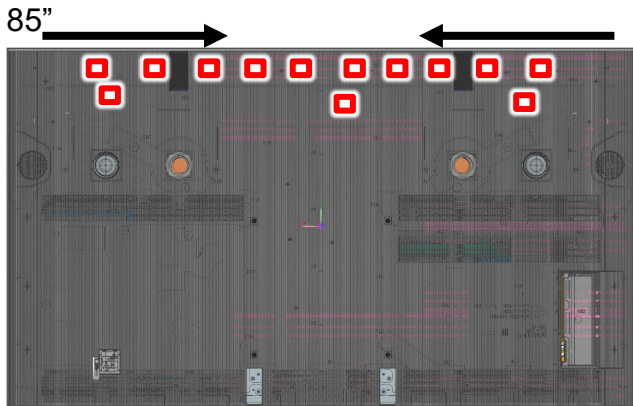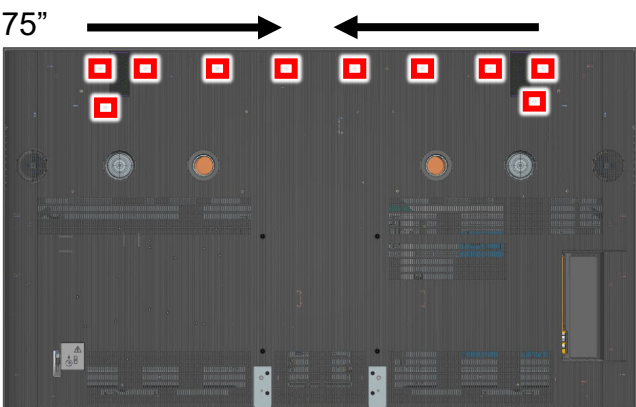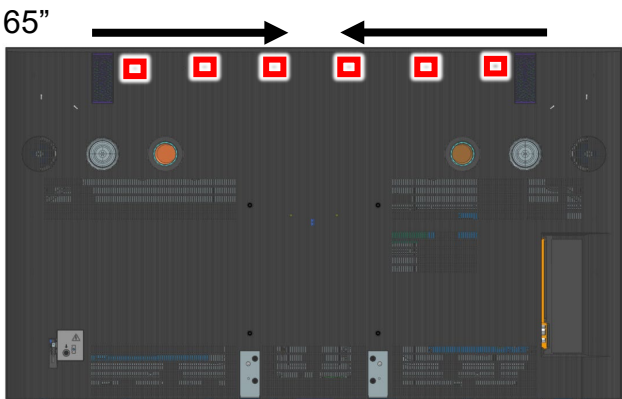

DISASSEMBLY & REMOVAL CAUTION 65" / 75" / 85"

REAR COVER


Hooks position.

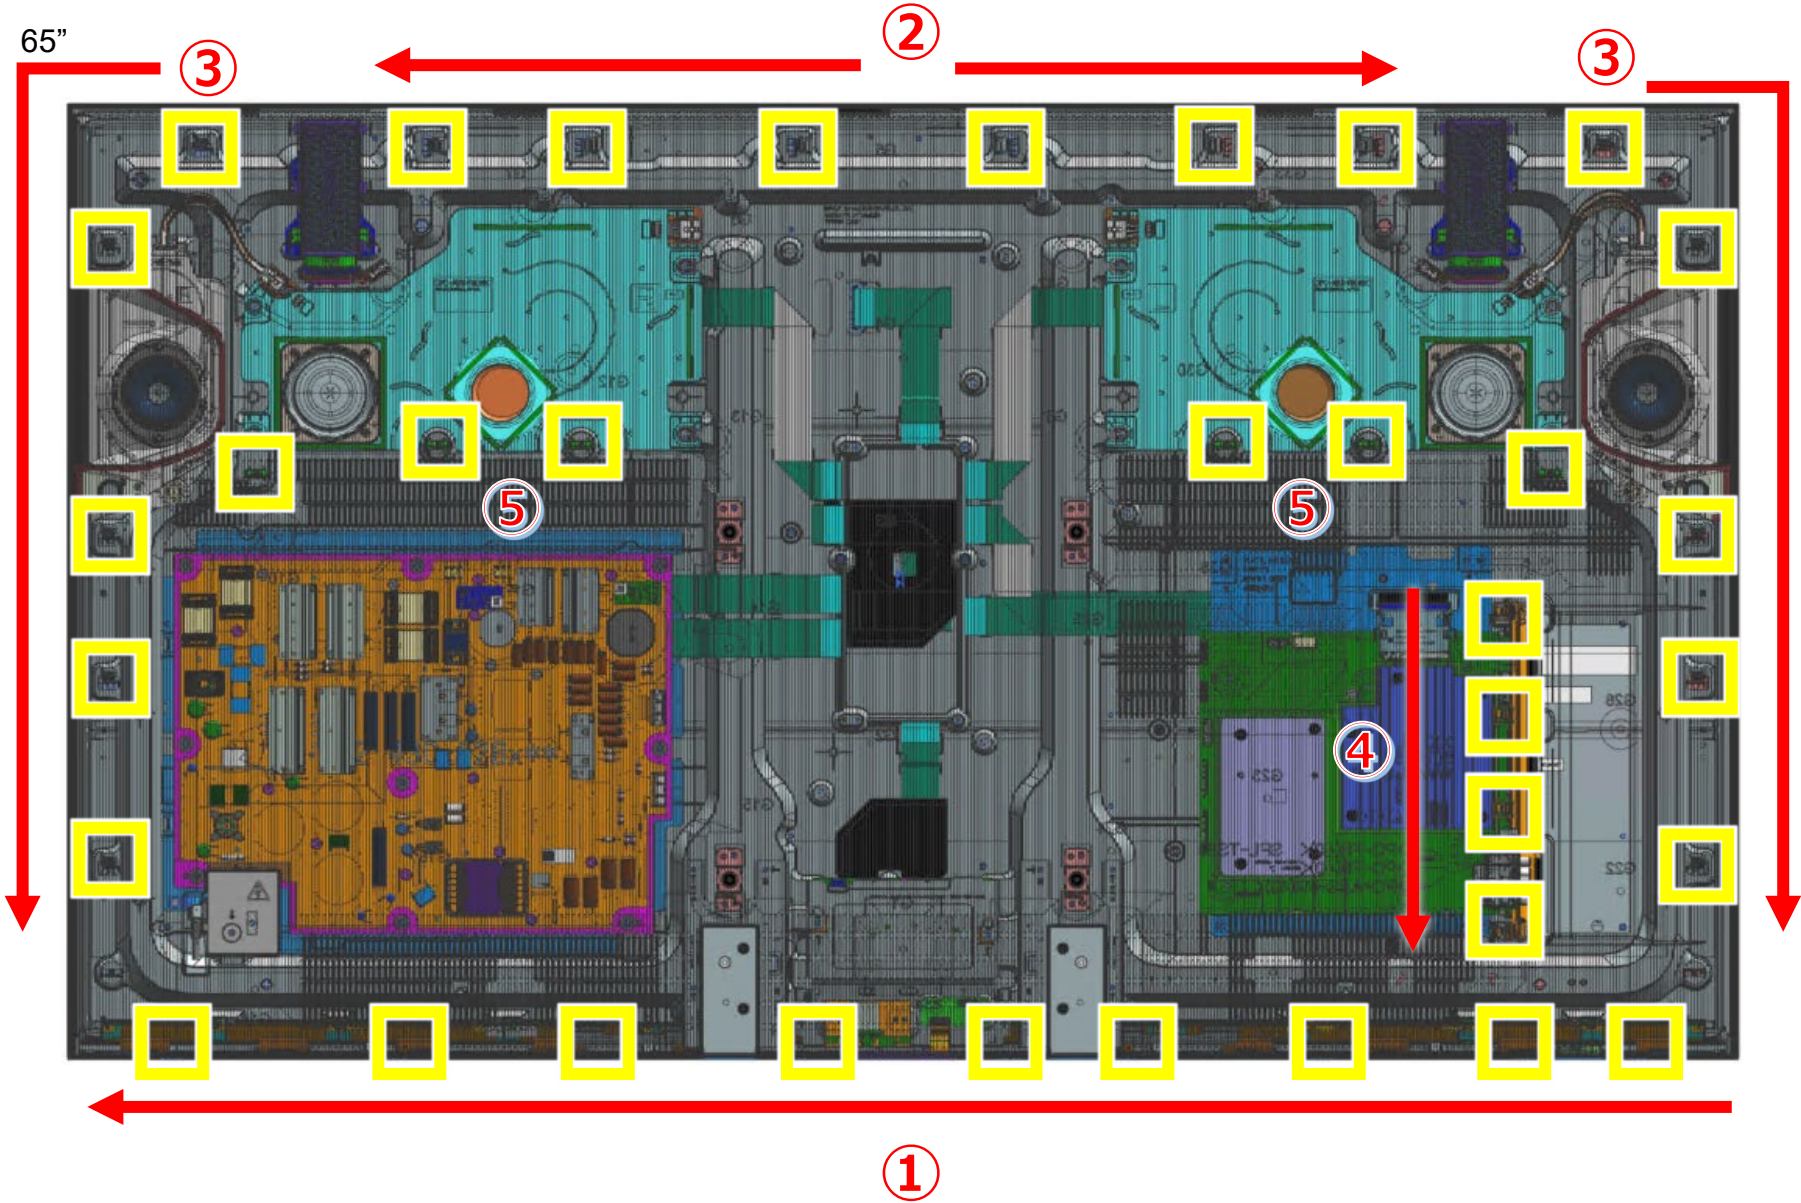

DISASSEMBLY & REMOVAL CAUTION 65" / 75" / 85"

REAR COVER


Hooks position.

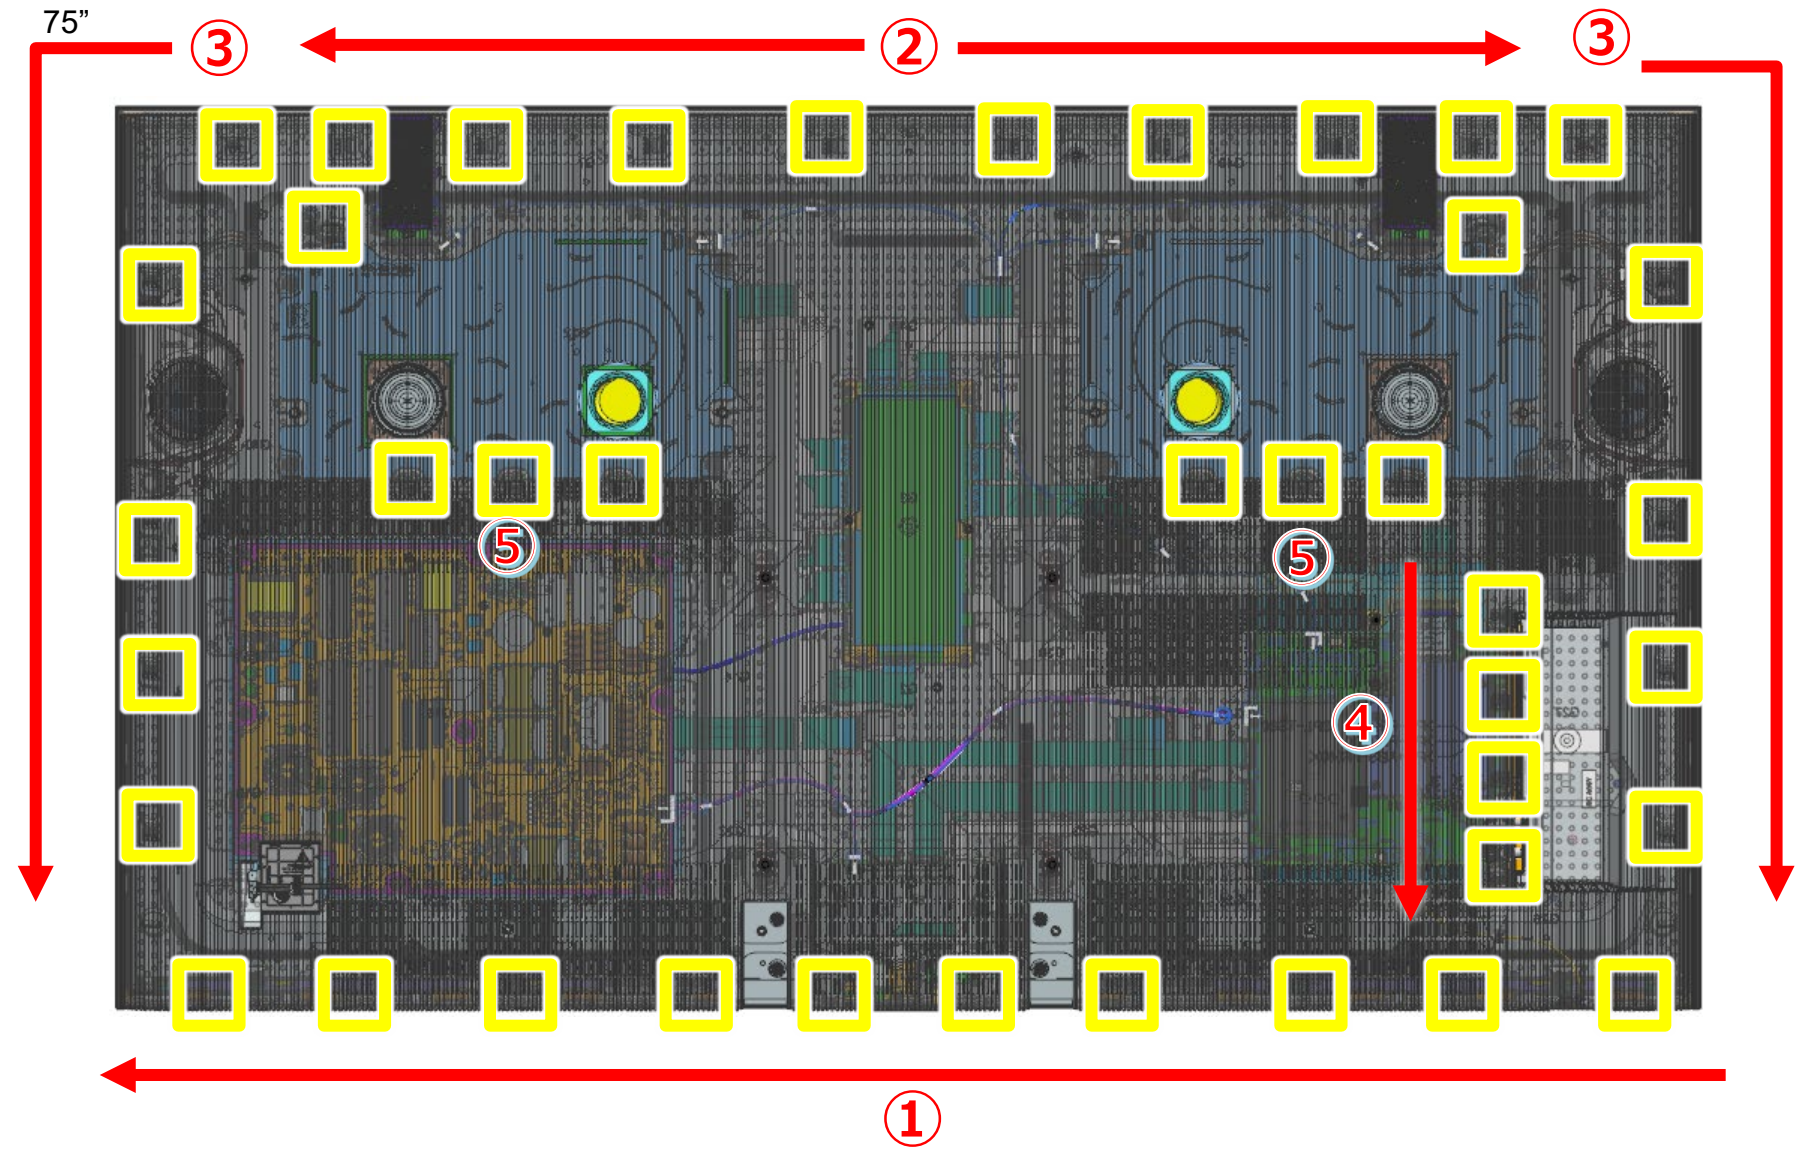

DISASSEMBLY & REMOVAL CAUTION 65" / 75" / 85"

REAR COVER

Hooks position.

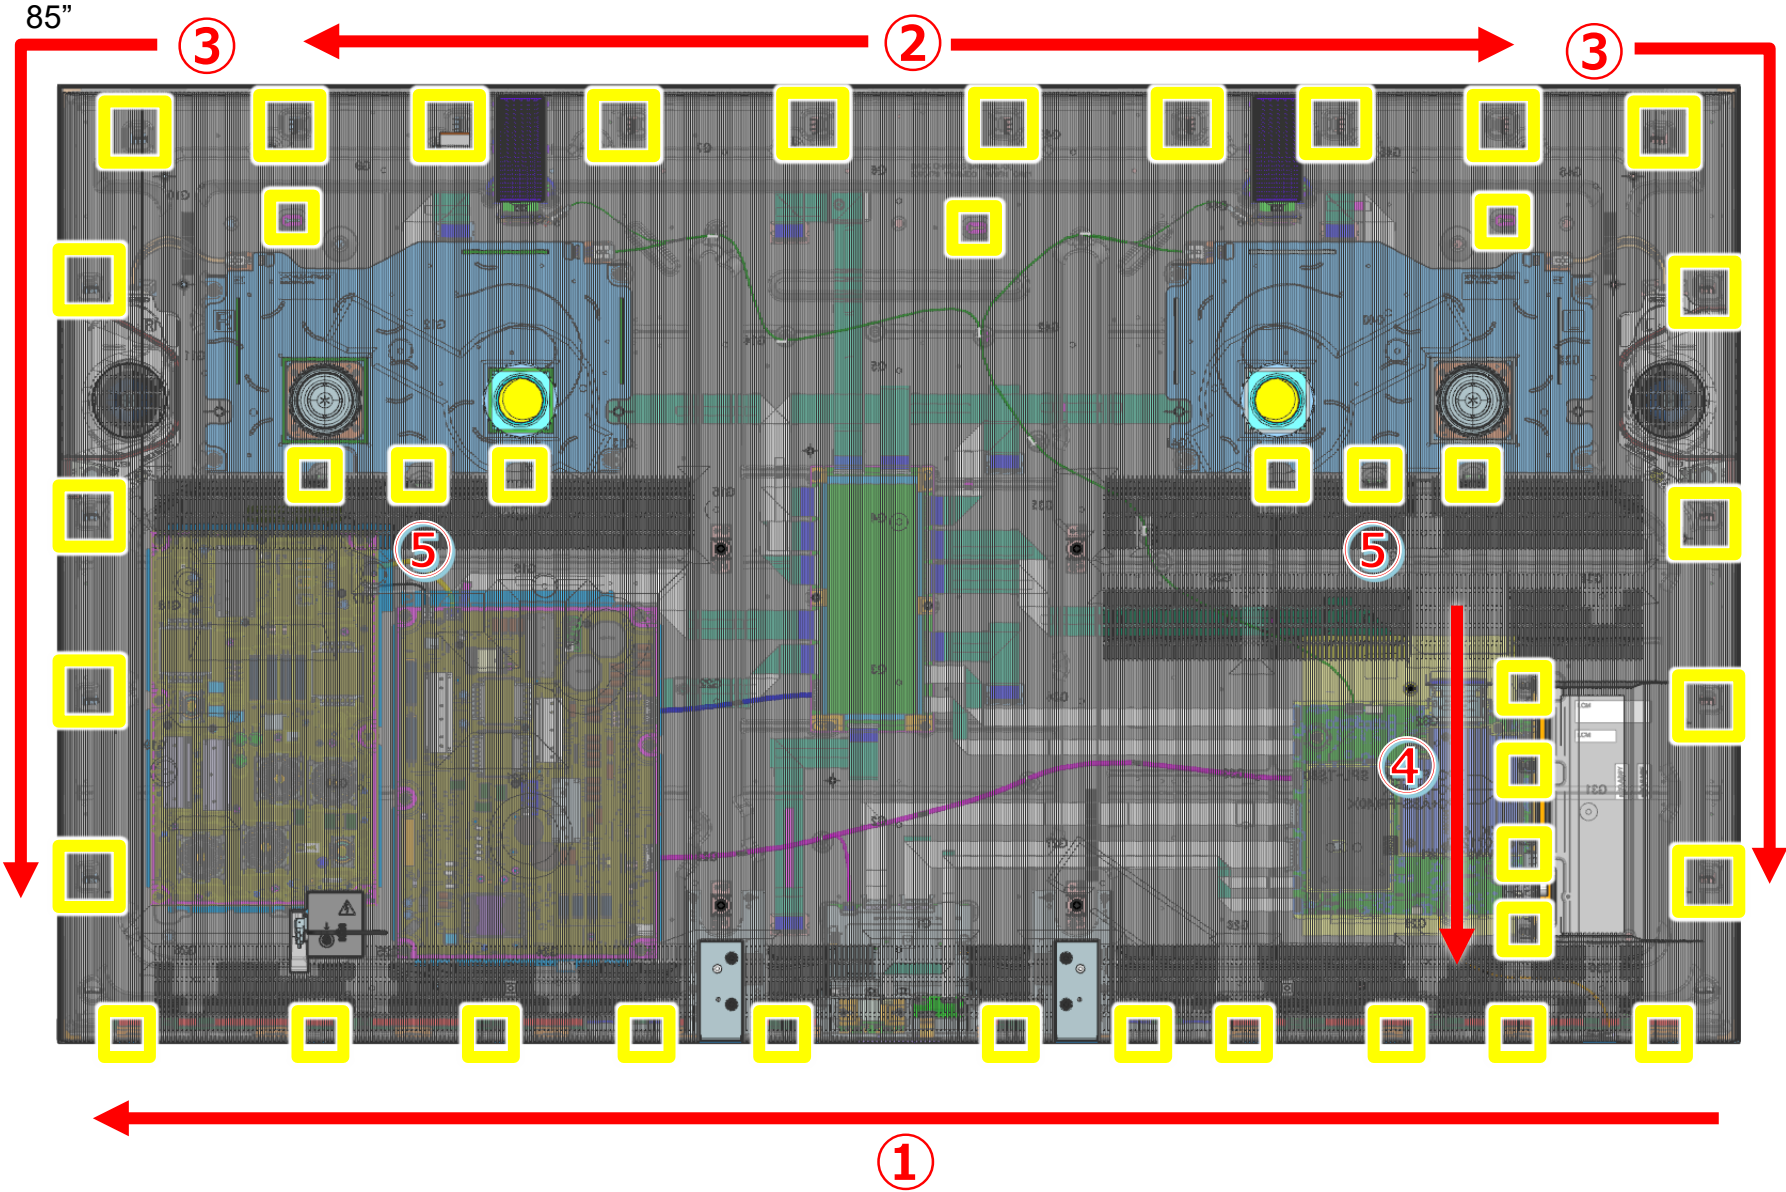


DISASSEMBLY & REMOVAL CAUTION 65" / 75" / 85"

REAR COVER

Jig information.

- ① Handmade jig.

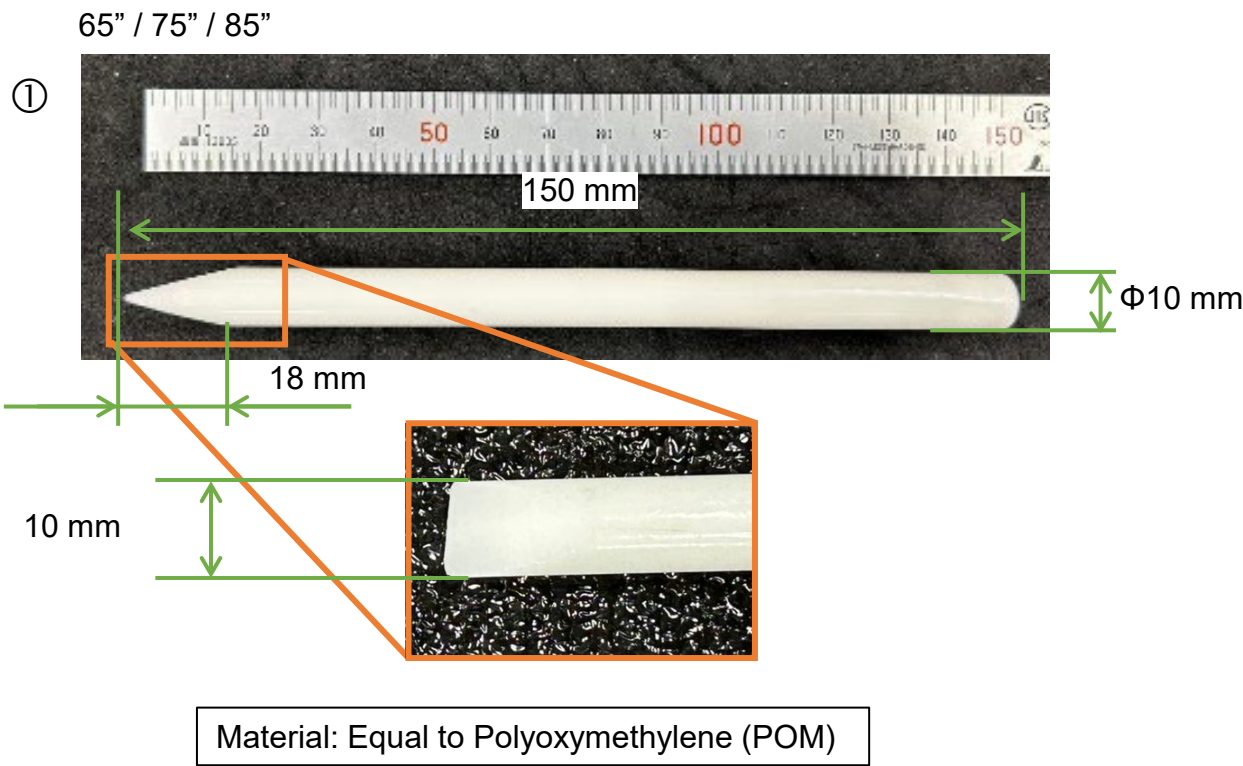



- ② Clip remover. Can also use off the shelf products.




DISASSEMBLY & REMOVAL CAUTION 65" / 75" / 85"

STAND

1) Remove Stand Front Cover (SF).

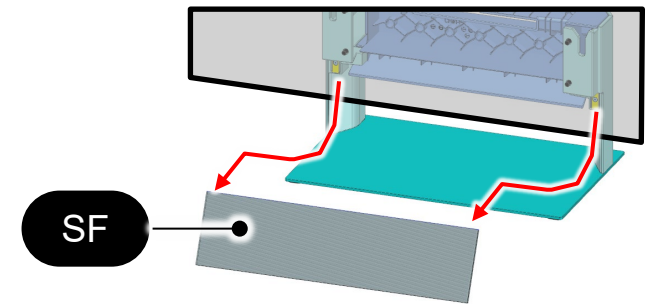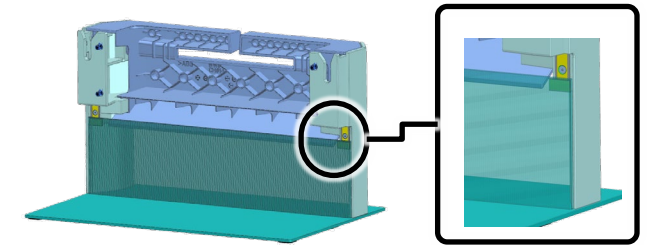


2) Remove Stand Back Cover (SR).

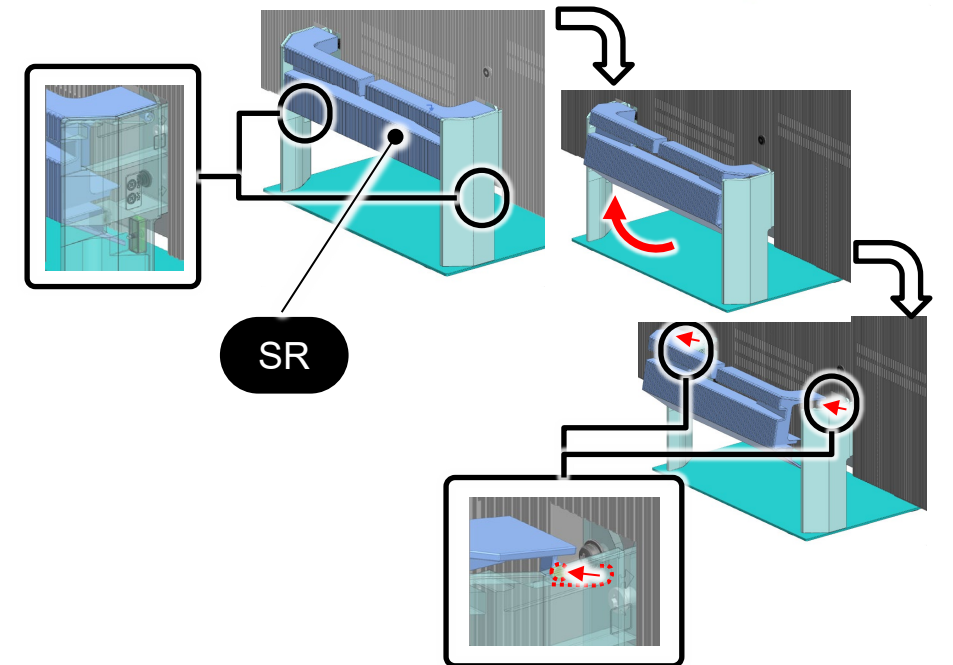


DISASSEMBLY & REMOVAL CAUTION 65" / 75" / 85"

STAND

3) Remove Screw M5x12 (4 pcs).

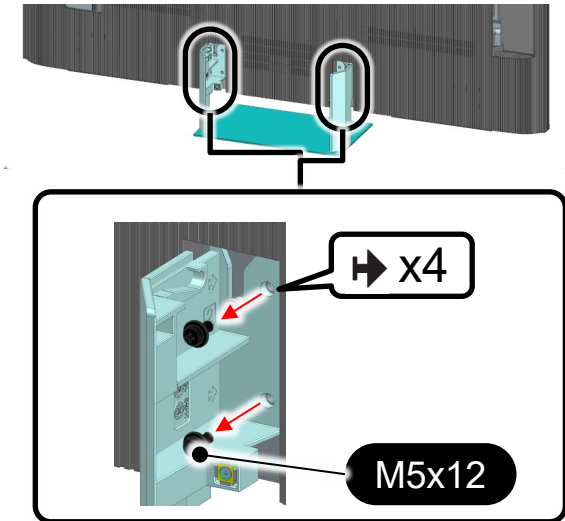


4) Remove TV-set.

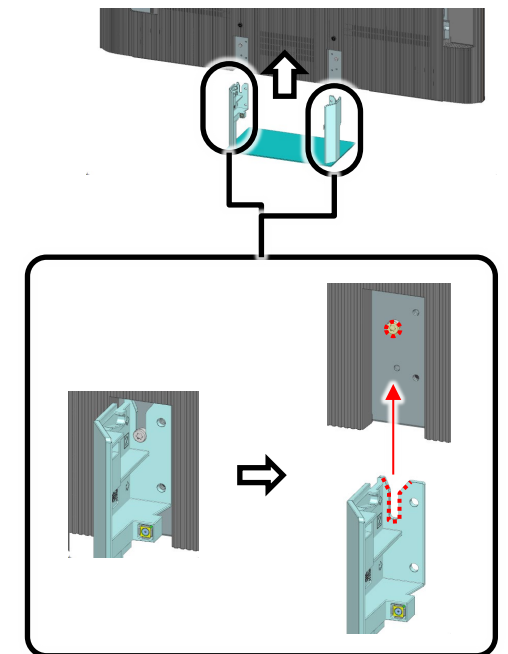


DISASSEMBLY & REMOVAL CAUTION 65" / 75" / 85"

STAND

- 5) Put stand on cloth to prevent scratch or dent.

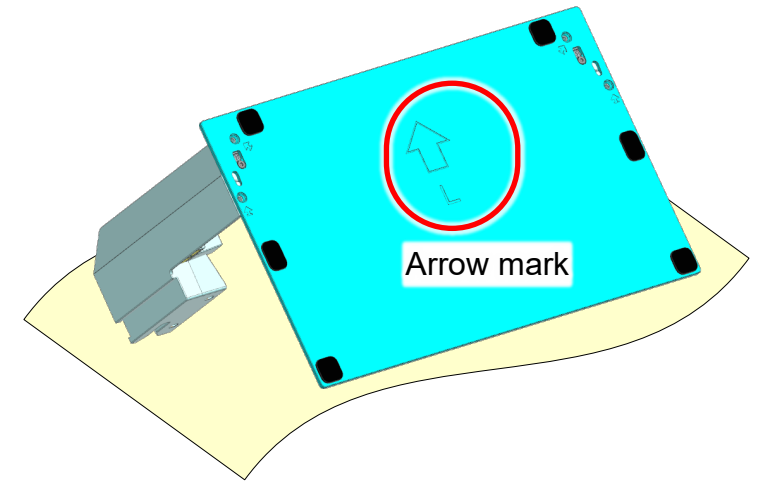

- 6) To remove the Stand Arm, slide Stand Arm while pressing the Polyoxymethylene (POM) hook.

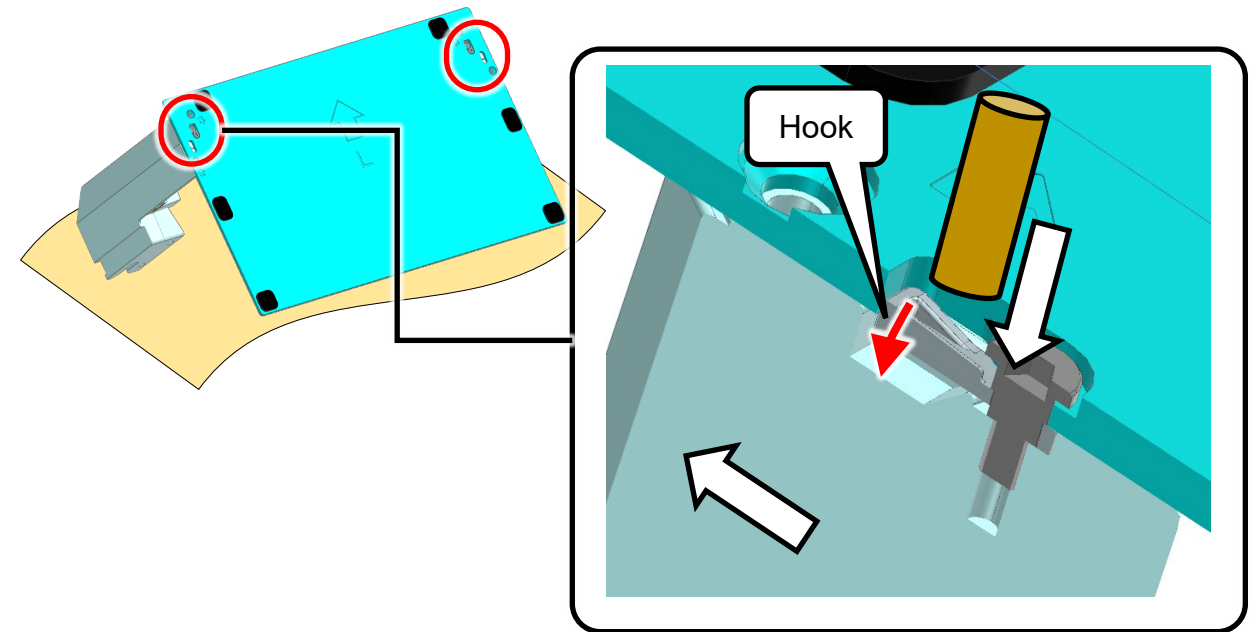


DISASSEMBLY & REMOVAL CAUTION 115"

REAR COVER

- 1) Remove Screw from Rear Cover.


Total Screw: 8 pcs.

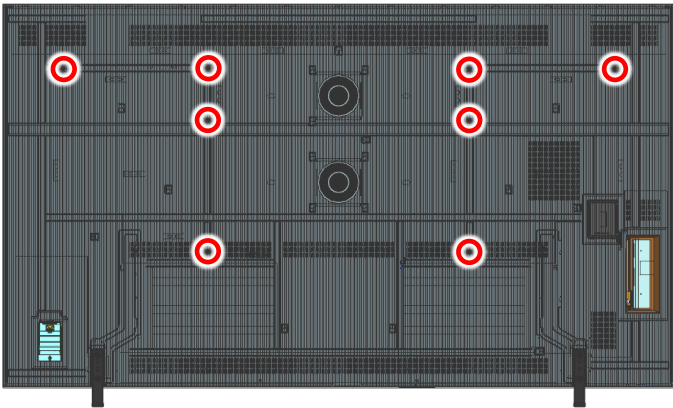

- 2) Insert a 0.2~0.5 mm thin plate between the Rear Cover and Bezel, slide it along the tape to break the adhesive and separate the Rear Cover from the Bezel.


Total tapes: 9 location.

 : Double-sided tape location.

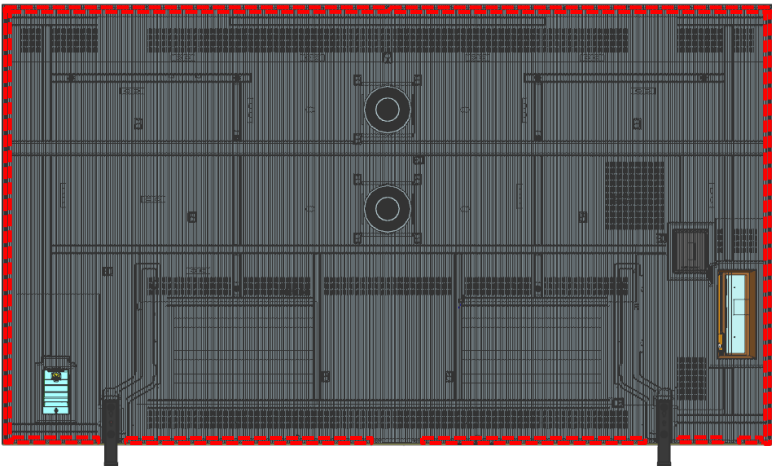

Thin plate JIG:

DESCRIPTION	PART NO.
Rework Spacer, PCH	5-016-753-01

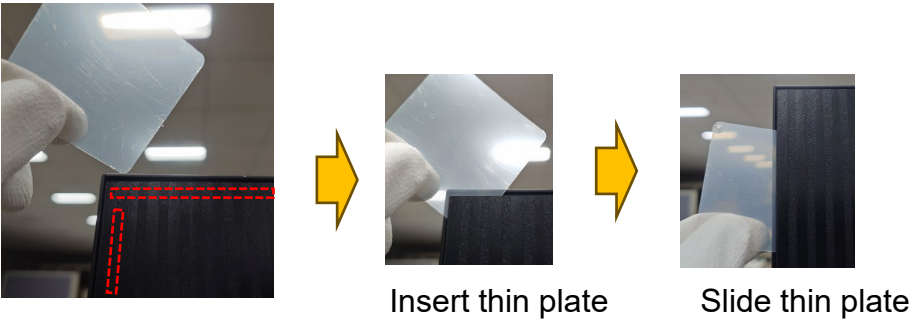


DISASSEMBLY & REMOVAL CAUTION 115"


REAR COVER

- 3) Unhook the hook and pull out the rubber bushing (18 pcs).
When removing the hook (5 pcs), please detach it in the direction of the arrow.

-  : Rubber Bushing location – 18 pcs.
-  : Side Bracket Hook location – 4 pcs.
-  : AC Hook location – 1 pc.

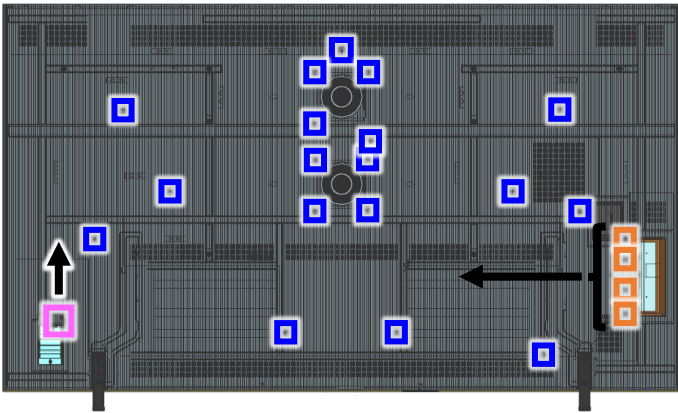


Rubber Bushing / Hook push order.

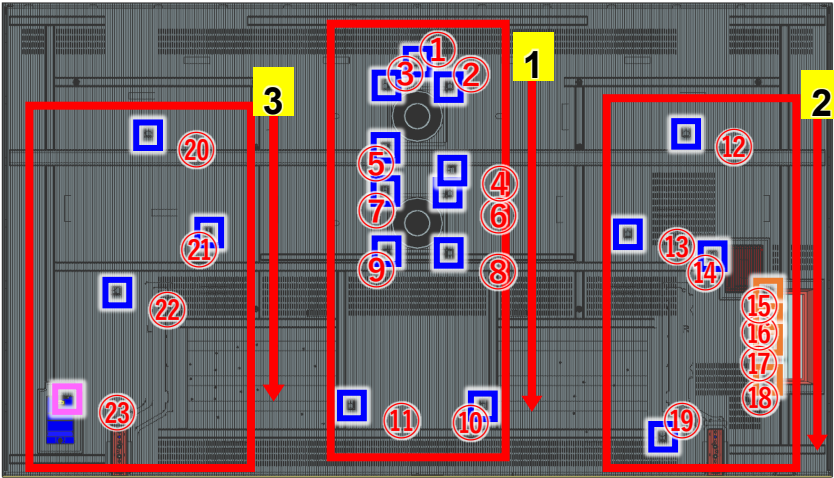

DISASSEMBLY & REMOVAL CAUTION 115"

REAR COVER

Rubber Bushing / Hook position.

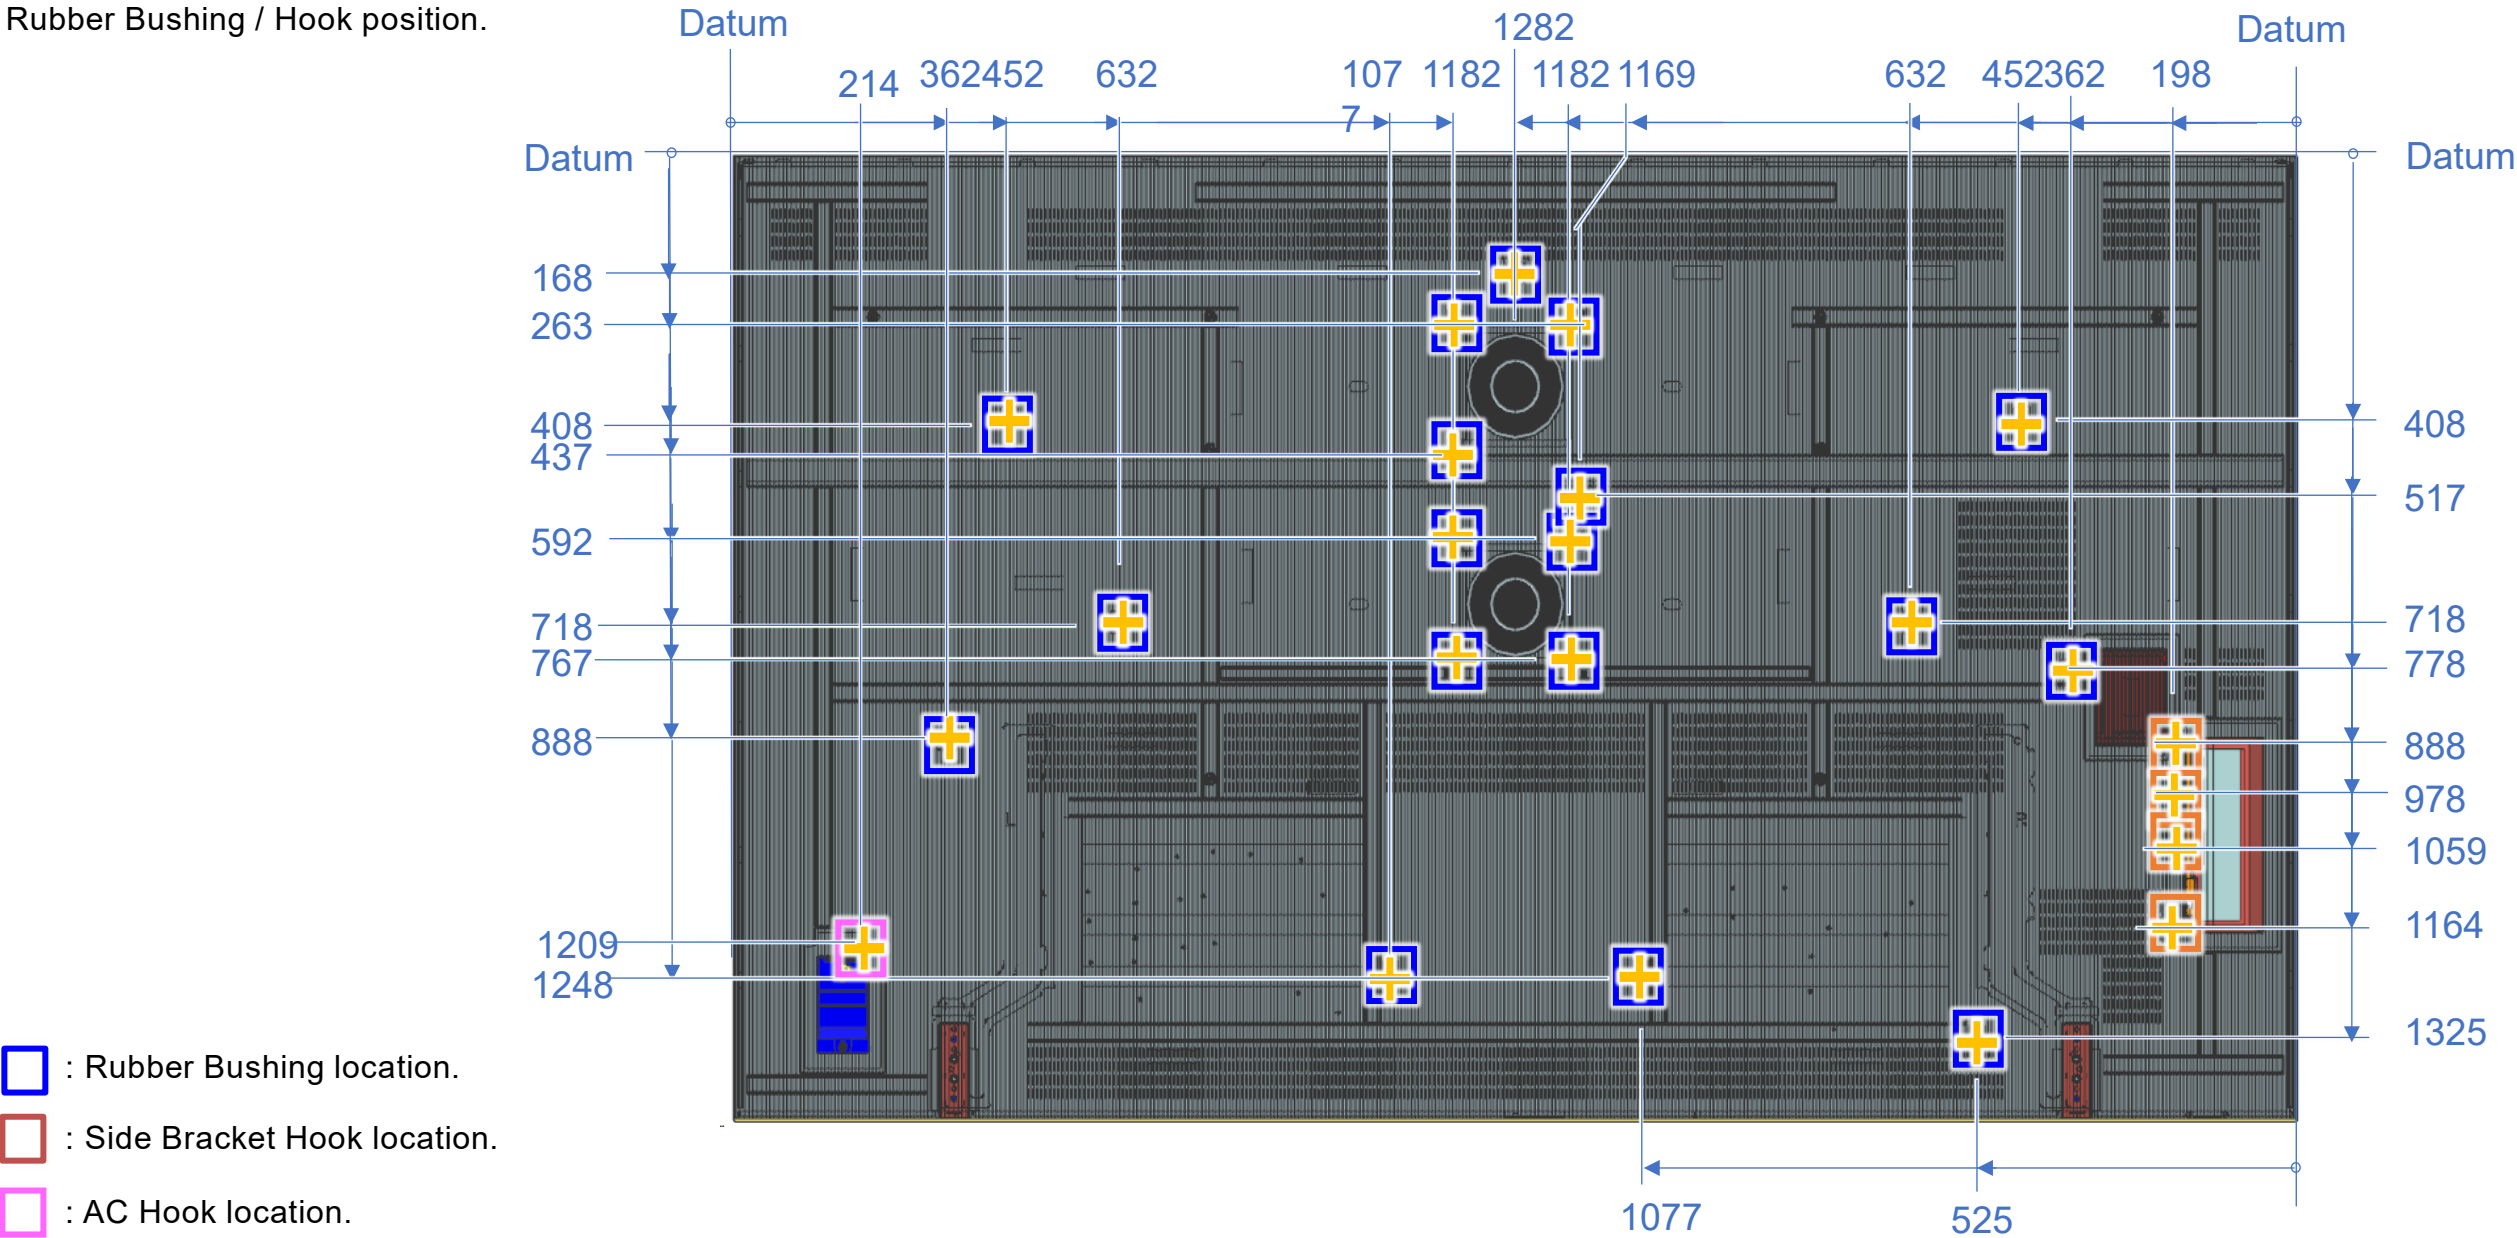


DISASSEMBLY & REMOVAL CAUTION 115"

REAR COVER

Remove Rear Cover.


- ① Recommend 4-person handling, because Rear Cover is thin and easily bent.

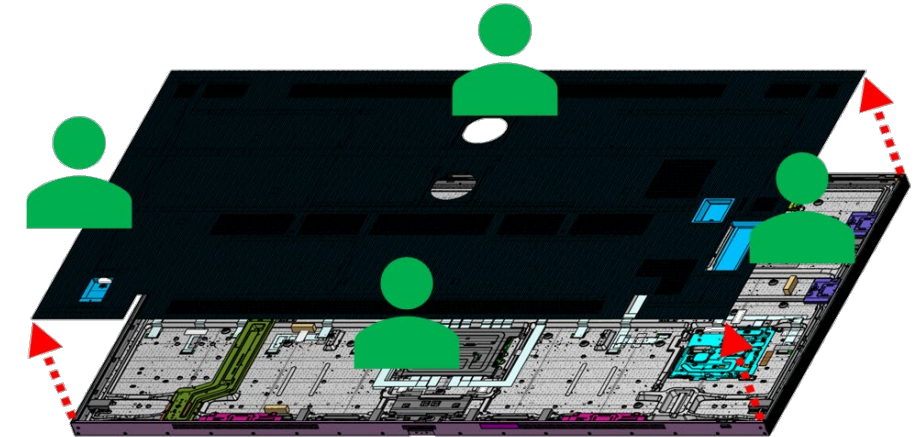


DISASSEMBLY & REMOVAL CAUTION 115"

STAND

- 1) Remove screw M6x16.

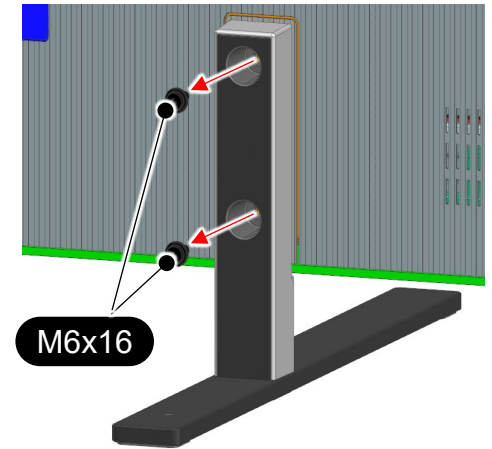


- 2) Remove Stand (SB) from TV set.

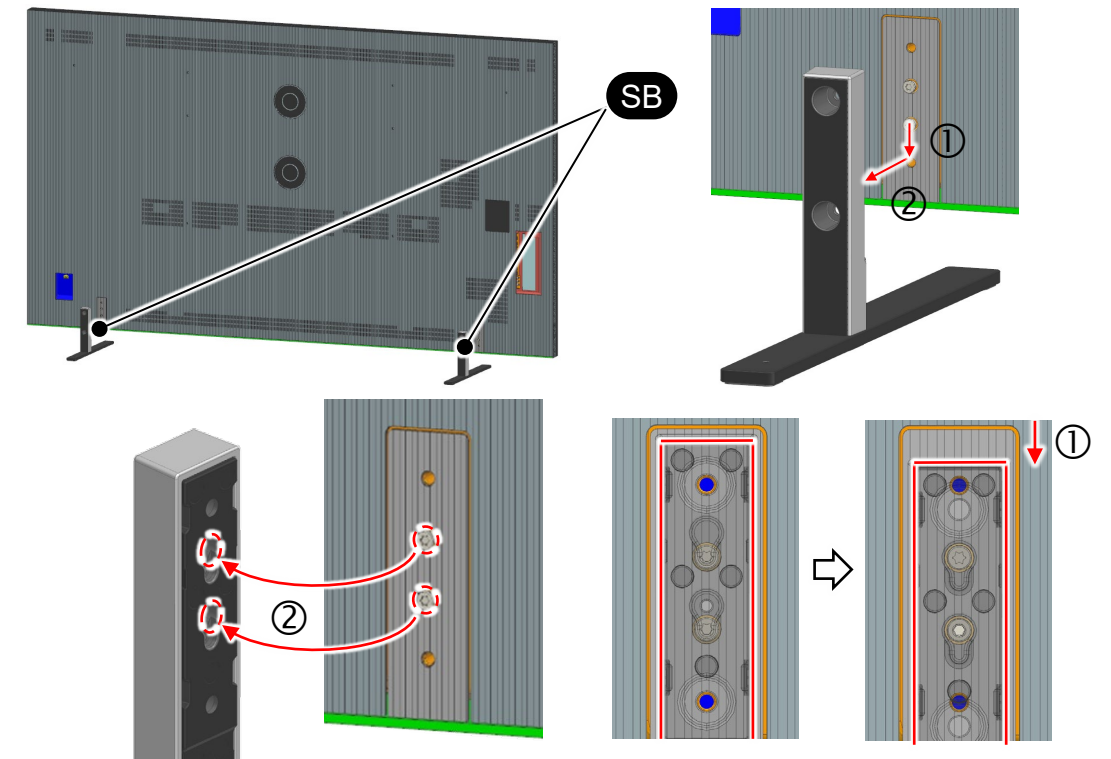

DISASSEMBLY & REMOVAL CAUTION 115"



STAND

- 3) Recommend to use block or box with soft-surface approx. 70 mm height, for making a clearance from the floor. Keep holding Panel / TV set, then remove the Stand.

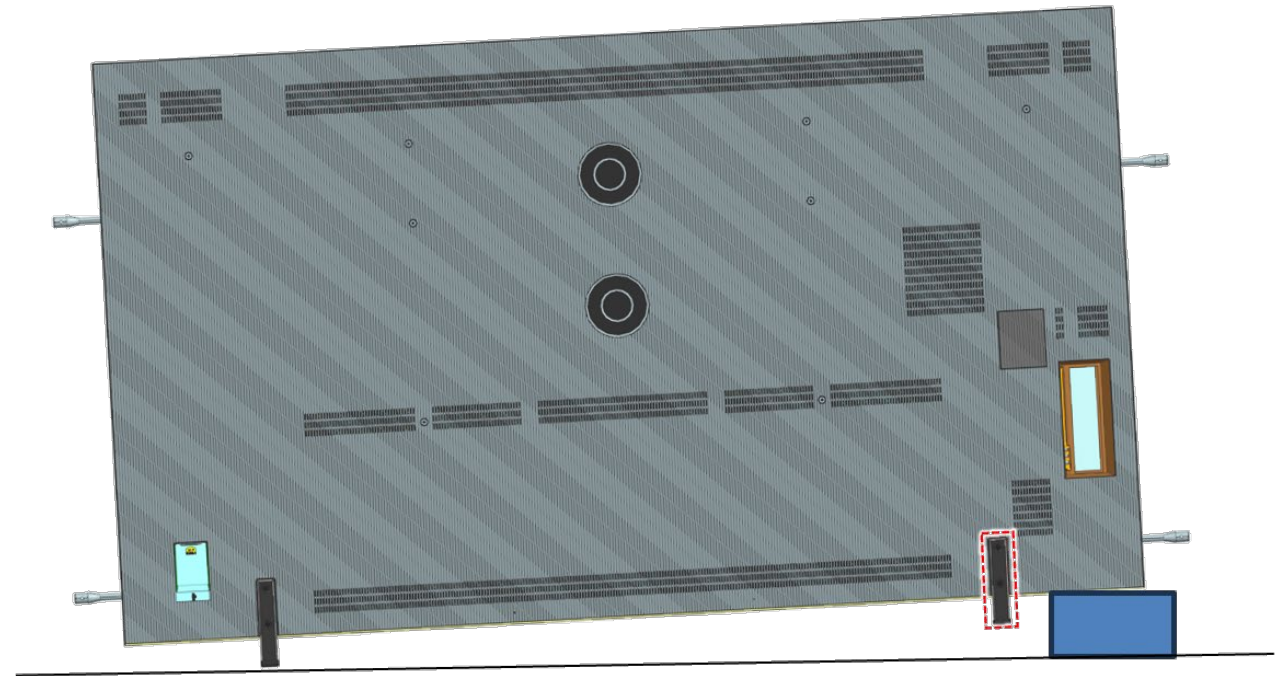

EXPLODED VIEW & PART LIST 65"

- Place the TV set facing downwards on a stable, level surface before disassembly and assembly of parts.
 -  and shaded parts are critical for safety. Replace only with part number specified.
 -  Parts contain confidential information. Strictly follow the instruction whenever the components are repaired and/or replaced.
- ☐ (*) Parts are not stocked since they are seldom required for routine service. Some delays should be anticipated when ordering these components.
 - ☐ Picture provided in this section might have slight difference from the actual sets.
 - ☐ The reference number beside the part indicates the disassembly sequence.
 - ☐ Remove screws before disassembly. Unplug connectors before disassembly

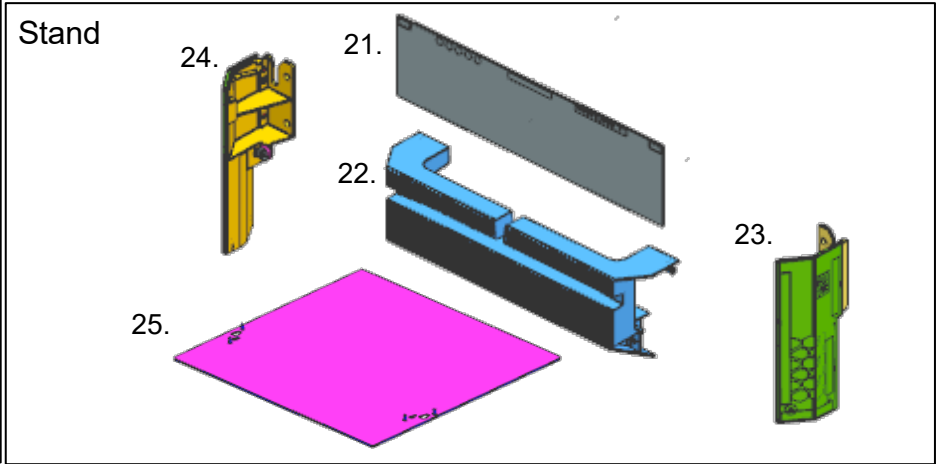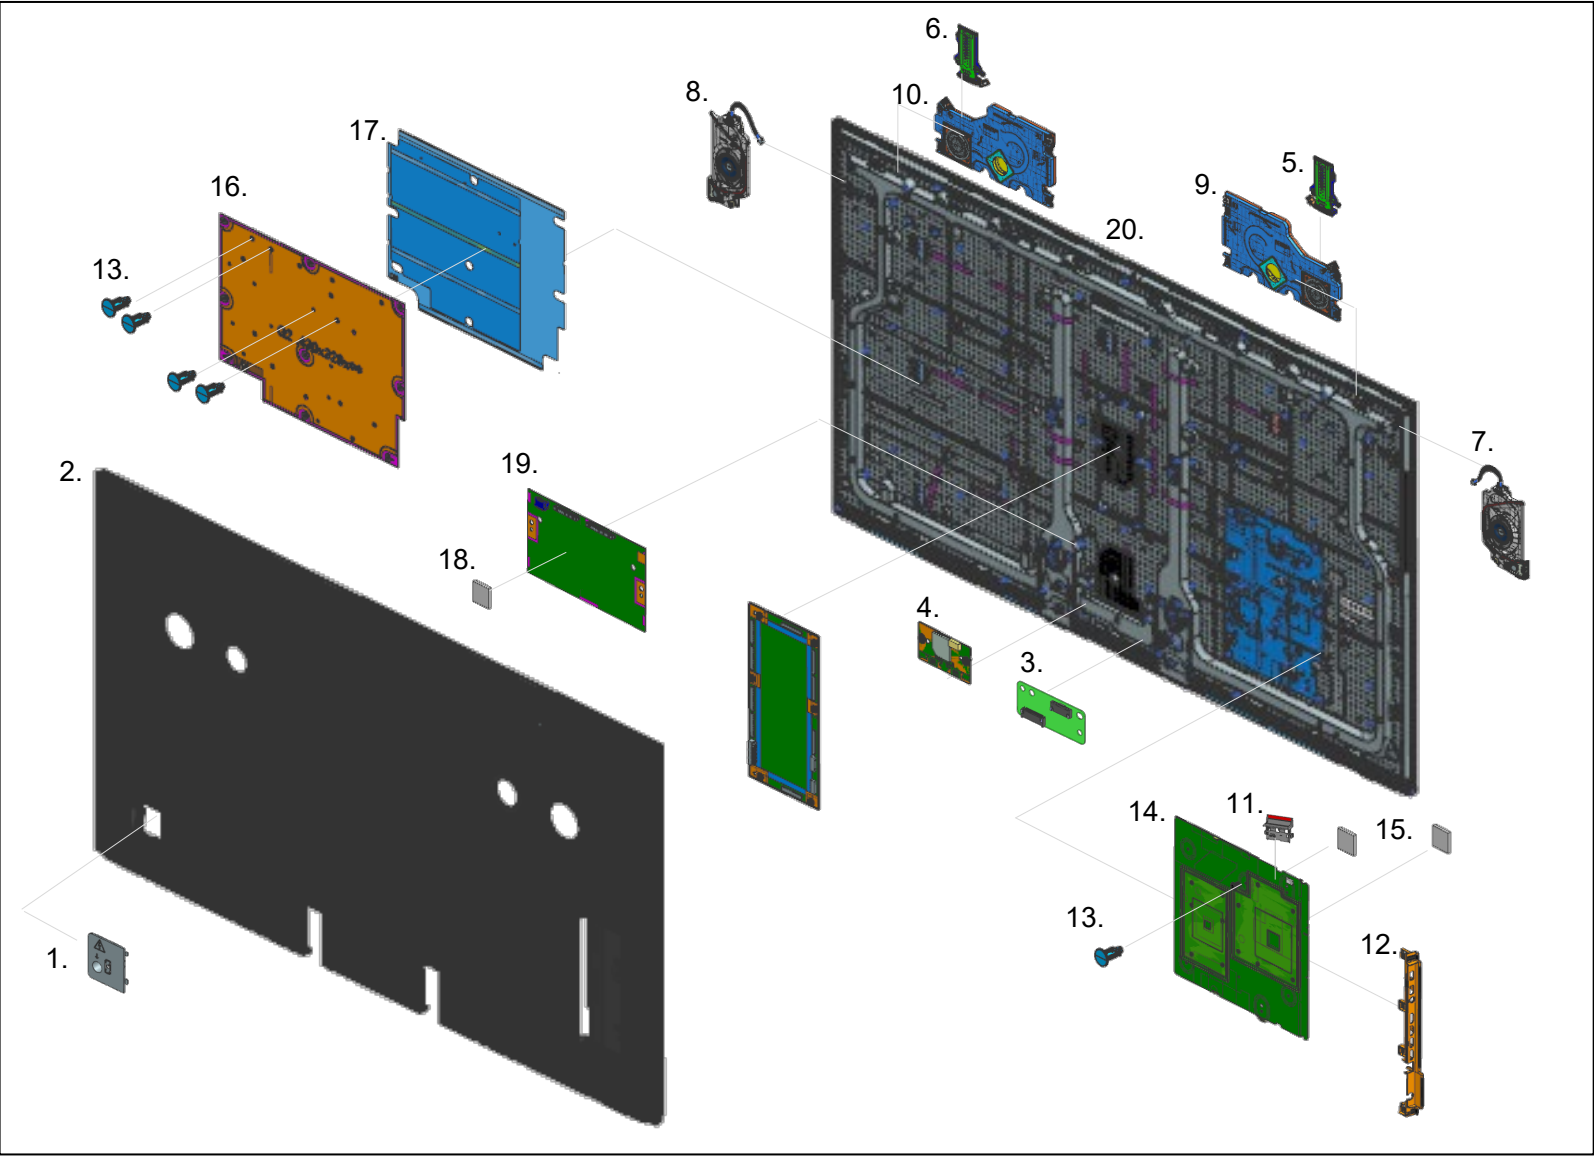



EXPLODED VIEW & PART LIST 65”

SET PART LIST

REF. NO	PART NO.	DESCRIPTION	REMARKS
 14	A-5087-076-A	COMPL SVC BM6LL26 XK EU	Printed Circuit Board incl. capacitors
 16	1-025-466-11	G62 - STATIC CONVERTER(TV)	Internal Power Supply
19	1-025-869-11	MOUNTED PWB E-T-CON (65)	Printed Circuit Board incl. capacitors
 20	A-5084-038-A	P-MOD(YDGO065MUS02)	Liquid Crystal Display



EXPLODED VIEW & PART LIST 65”

OTHER PARTS

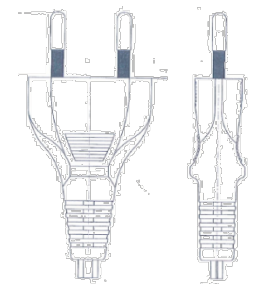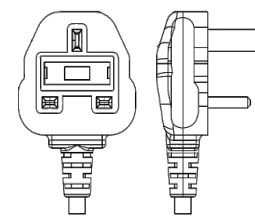REFERENCE	PART NO.	DESCRIPTION	REMARKS
	 1-912-984-41	POWER-SUPPLY CORD (CONN.)	CEI (Cable)
	 1-912-983-51	POWER-SUPPLY CORD (CONN.)	UKA (Cable)

EXPLODED VIEW & PART LIST 65"



CONNECTOR

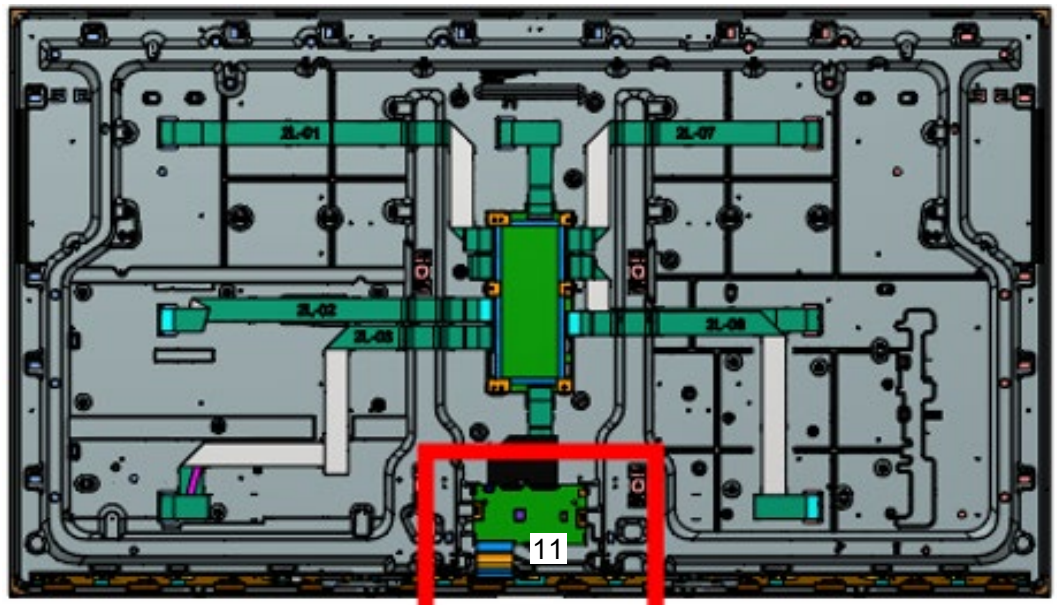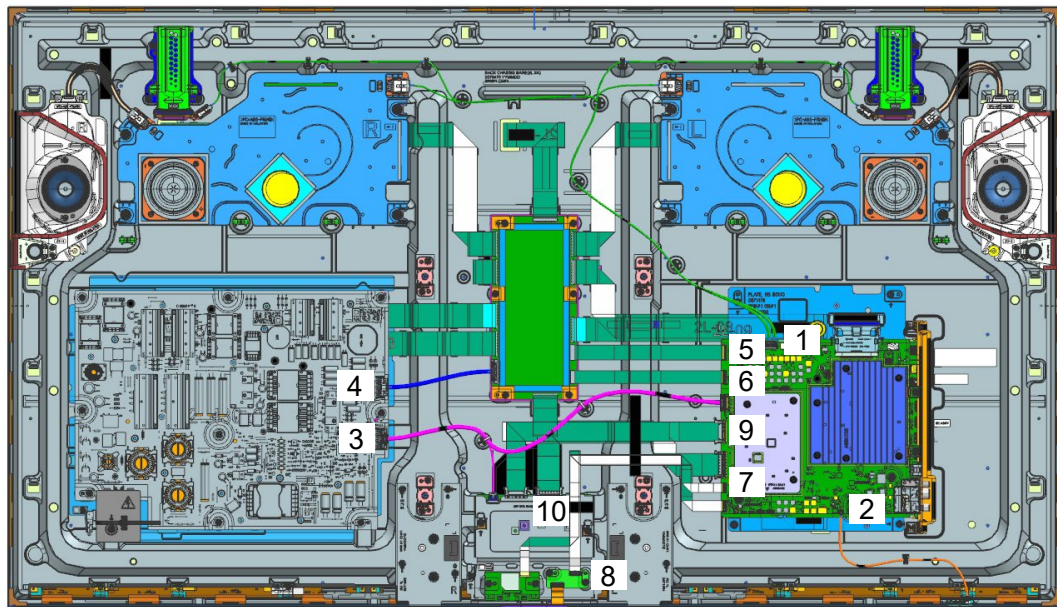

REF. NO	PART NO.	DESCRIPTION	REMARKS
1	1-027-092-11	CONNECTOR ASSY 16P(SP)	CN6411(B)-SP(1)
2	1-027-090-11	CONNECTOR ASSY 4P(SW)	CN6801(B)-SW(1)
3	1-027-088-11	CONNECTOR ASSY 28P(GBT)	CN6401(G)-CN400(B)-TCON(1)
4	1-027-091-11	CONNECTOR ASSY 30P(GL)	CN6601(G)-CN4002(LC)(1)
5	1-027-039-11	FLEXIBLE FLAT CABLE 35P	CN6000(B)-CN4001(LC)(1)
6	1-027-038-11	FLEXIBLE FLAT CABLE 30P	CN6001(B)-CN4000(LC)(1)
7	1-027-030-11	FLEXIBLE FLAT CABLE 20P	CN3804(B)-BT(1)
8	1-027-031-11	FLEXIBLE FLAT CABLE 25P	CN301(H)-CN6800(B)(1)
9	1-027-034-11	FLEXIBLE FLAT CABLE 41P	CN6200(B)-CN301(TCON)(1)
10	1-027-035-11	FLEXIBLE FLAT CABLE 51P	CN6201(B)-CN300(TCON)(1)
11	1-025-870-11	FFC T-CON (65)	SOURCE BOARD-TCON

EXPLODED VIEW & PART LIST 75"

- Place the TV set facing downwards on a stable, level surface before disassembly and assembly of parts.
 -  and shaded parts are critical for safety. Replace only with part number specified.
 -  Parts contain confidential information. Strictly follow the instruction whenever the components are repaired and/or replaced.
- ☐ (*) Parts are not stocked since they are seldom required for routine service. Some delays should be anticipated when ordering these components.
 - ☐ Picture provided in this section might have slight difference from the actual sets.
 - ☐ The reference number beside the part indicates the disassembly sequence.
 - ☐ Remove screws before disassembly. Unplug connectors before disassembly

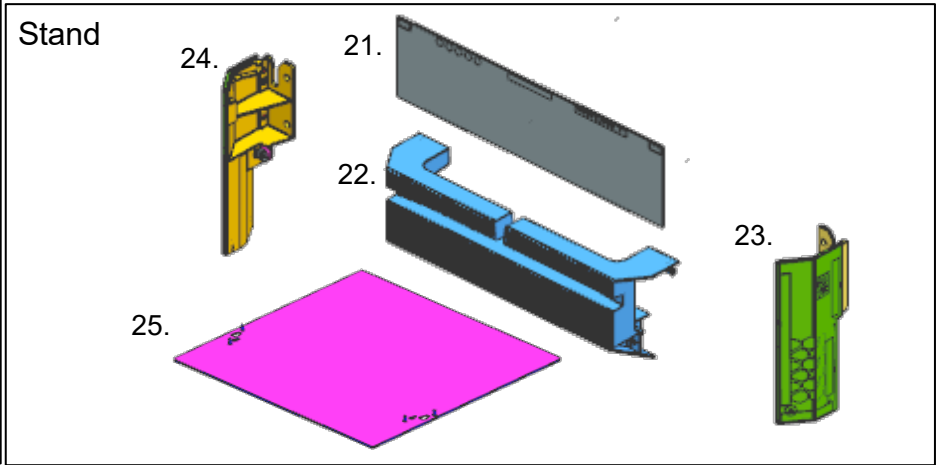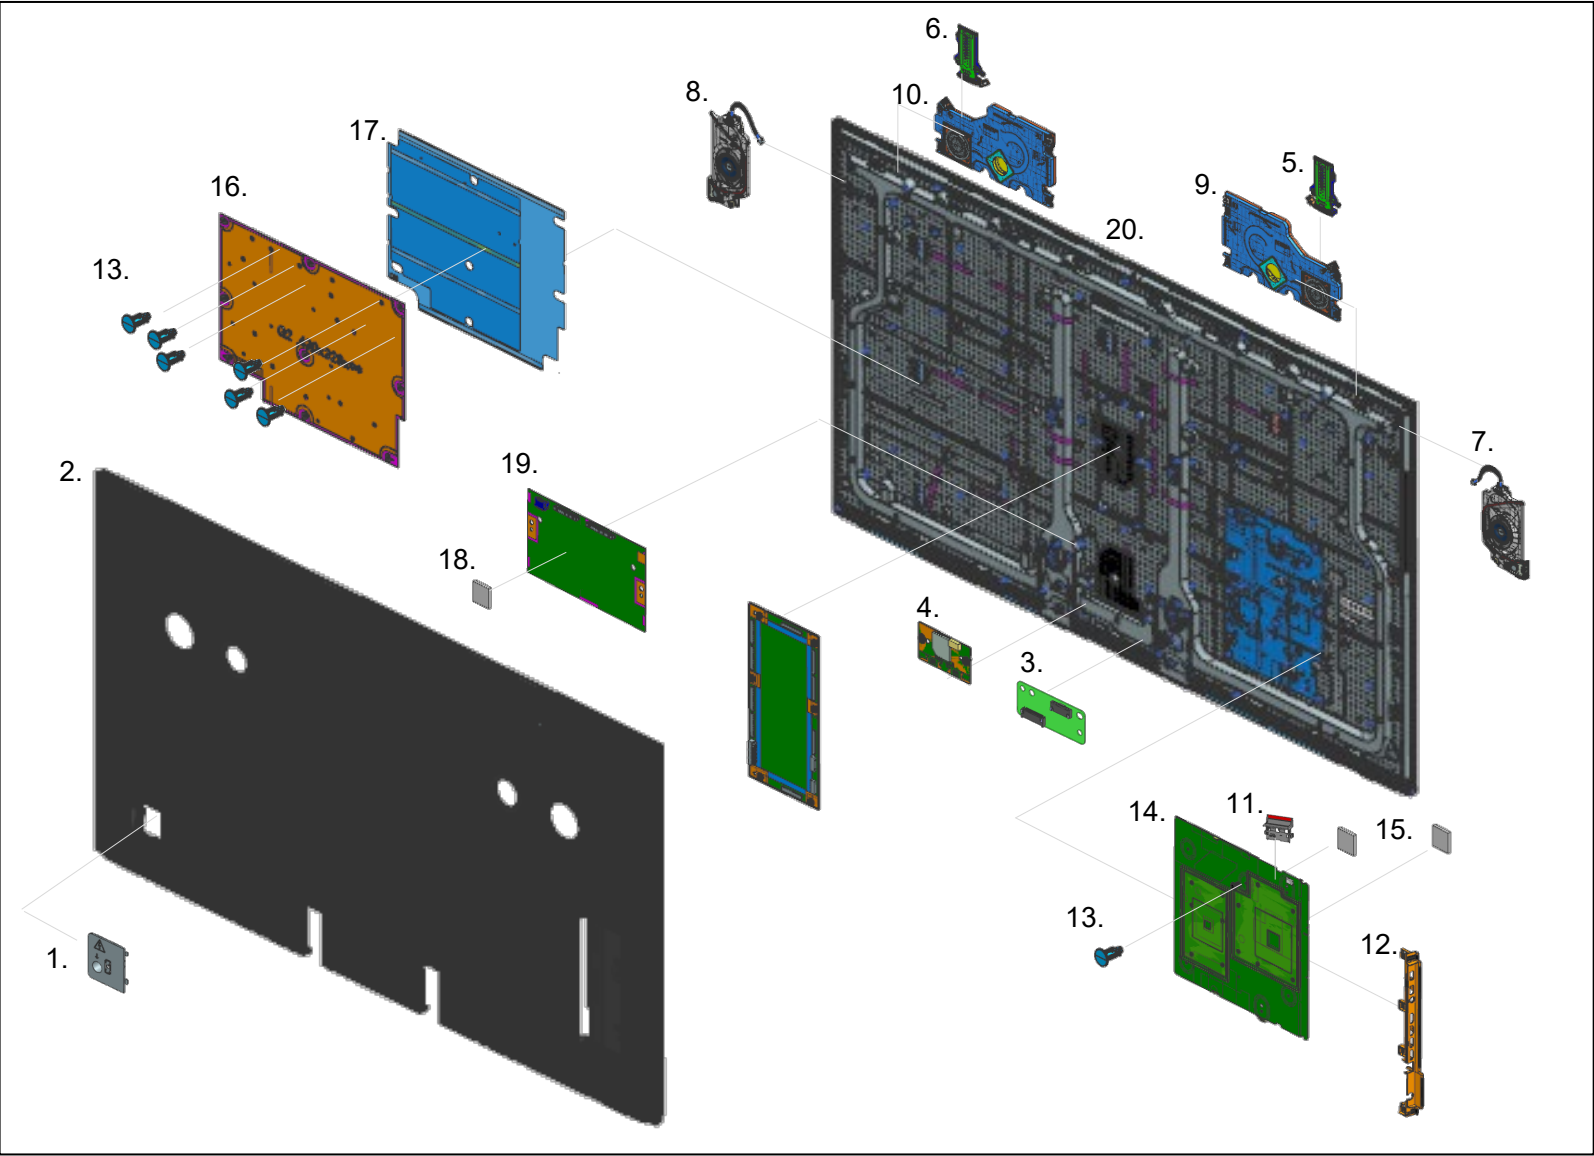



EXPLODED VIEW & PART LIST 75”

SET PART LIST

REF. NO	PART NO.	DESCRIPTION	REMARKS
 14	A-5087-076-A	COMPL SVC BM6LL26 XK EU	Printed Circuit Board incl. capacitors
 16	1-025-467-11	G63 - STATIC CONVERTER(TV)	Internal Power Supply
19	1-025-867-11	MOUNTED PWB E-T-CON (75)	Printed Circuit Board incl. capacitors
 20	A-5084-034-A	P-MOD(YDGO075MUS02)	Liquid Crystal Display


EXPLODED VIEW & PART LIST 75”

OTHER PARTS

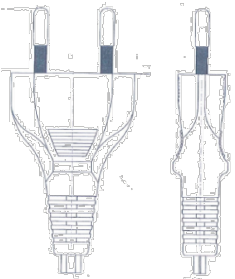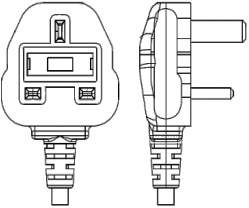REFERENCE	PART NO.	DESCRIPTION	REMARKS
	 1-912-984-41	POWER-SUPPLY CORD (CONN.)	CEI (Cable)
	 1-912-983-51	POWER-SUPPLY CORD (CONN.)	UKA (Cable)

EXPLODED VIEW & PART LIST 75"

CONNECTOR


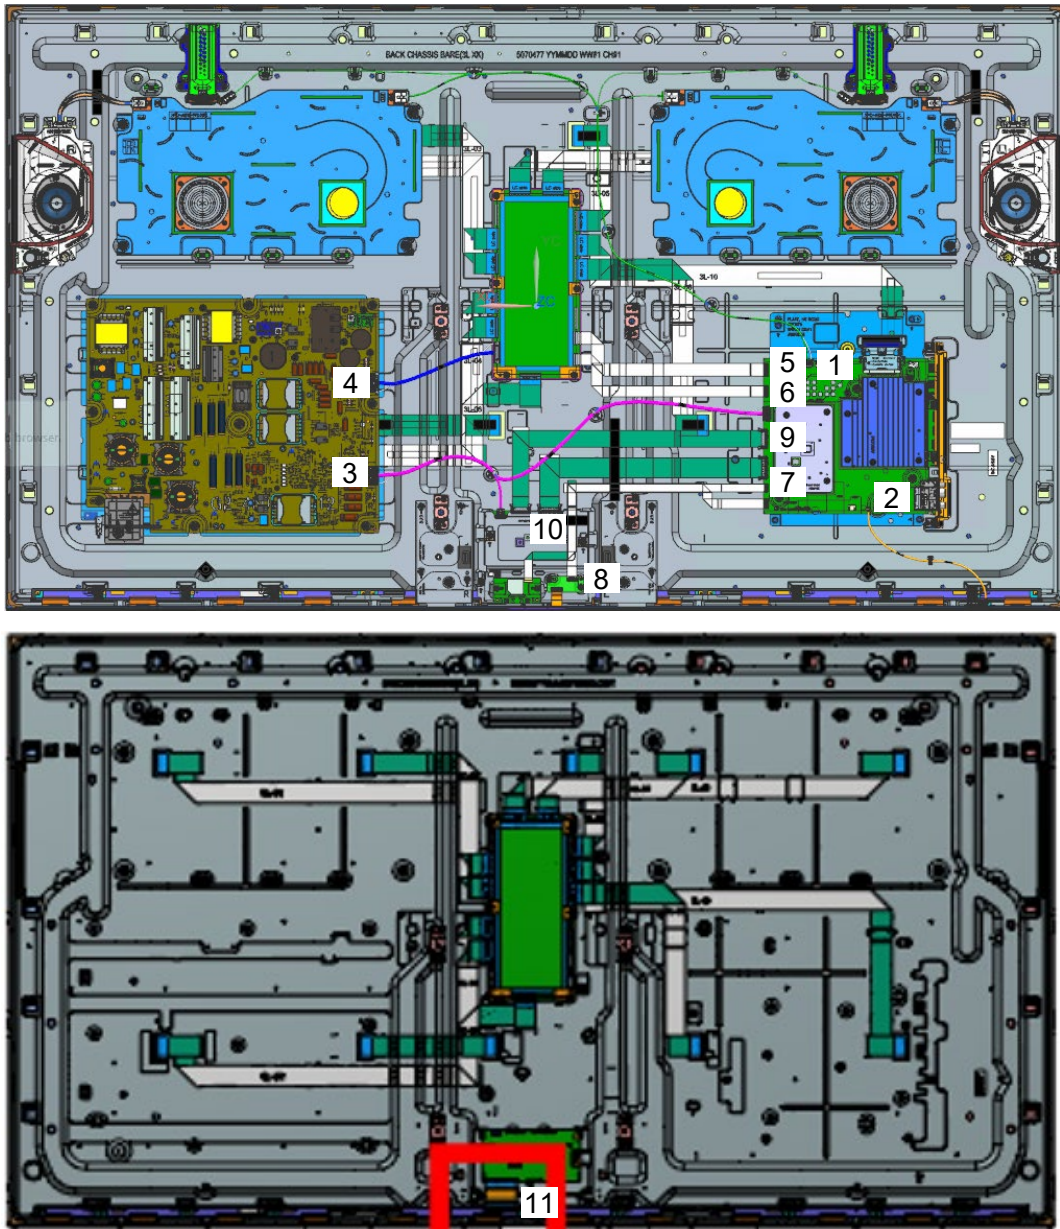


REF. NO	PART NO.	DESCRIPTION	REMARKS
1	1-027-097-11	CONNECTOR ASSY 16P(SP)	CN6411(B)-SP(1)
2	1-027-090-11	CONNECTOR ASSY 4P(SW)	CN6801(B)-SW(1)
3	1-027-094-11	CONNECTOR ASSY 28P(GBT)	CN6401(G)-CN400(B)-TCON(1)
4	1-027-096-11	CONNECTOR ASSY 30P(GL)	CN6601(G)-CN4002(LC)(1)
5	1-027-055-11	FLEXIBLE FLAT CABLE 35P	CN6000(B)-CN4001(LC)(1)
6	1-027-054-11	FLEXIBLE FLAT CABLE 30P	CN6001(B)-CN4000(LC)(1)
7	1-027-048-11	FLEXIBLE FLAT CABLE 20P	CN3804(B)-BT(1)
8	1-027-049-11	FLEXIBLE FLAT CABLE 25P	CN301(H)-CN6800(B)(1)
9	1-027-046-11	FLEXIBLE FLAT CABLE 41P	CN6200(B)-CN301(TCON)(1)
10	1-027-047-11	FLEXIBLE FLAT CABLE 51P	CN6201(B)-CN300(TCON)(1)
11	1-025-868-11	FFC T-CON (75)	SOURCE BOARD-TCON

EXPLODED VIEW & PART LIST 85"

- Place the TV set facing downwards on a stable, level surface before disassembly and assembly of parts.
-  and shaded parts are critical for safety. Replace only with part number specified.
-  Parts contain confidential information. Strictly follow the instruction whenever the components are repaired and/or replaced.

- ☐ (*) Parts are not stocked since they are seldom required for routine service. Some delays should be anticipated when ordering these components.
- ☐ Picture provided in this section might have slight difference from the actual sets.
- ☐ The reference number beside the part indicates the disassembly sequence.
- ☐ Remove screws before disassembly. Unplug connectors before disassembly

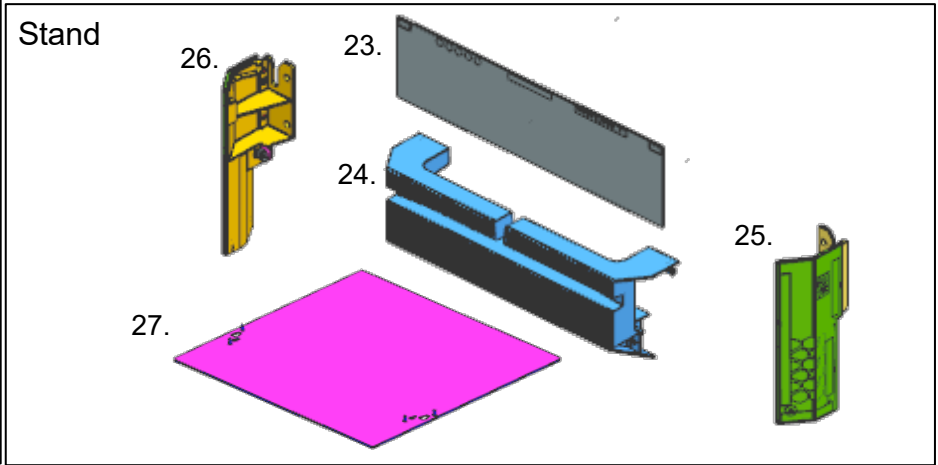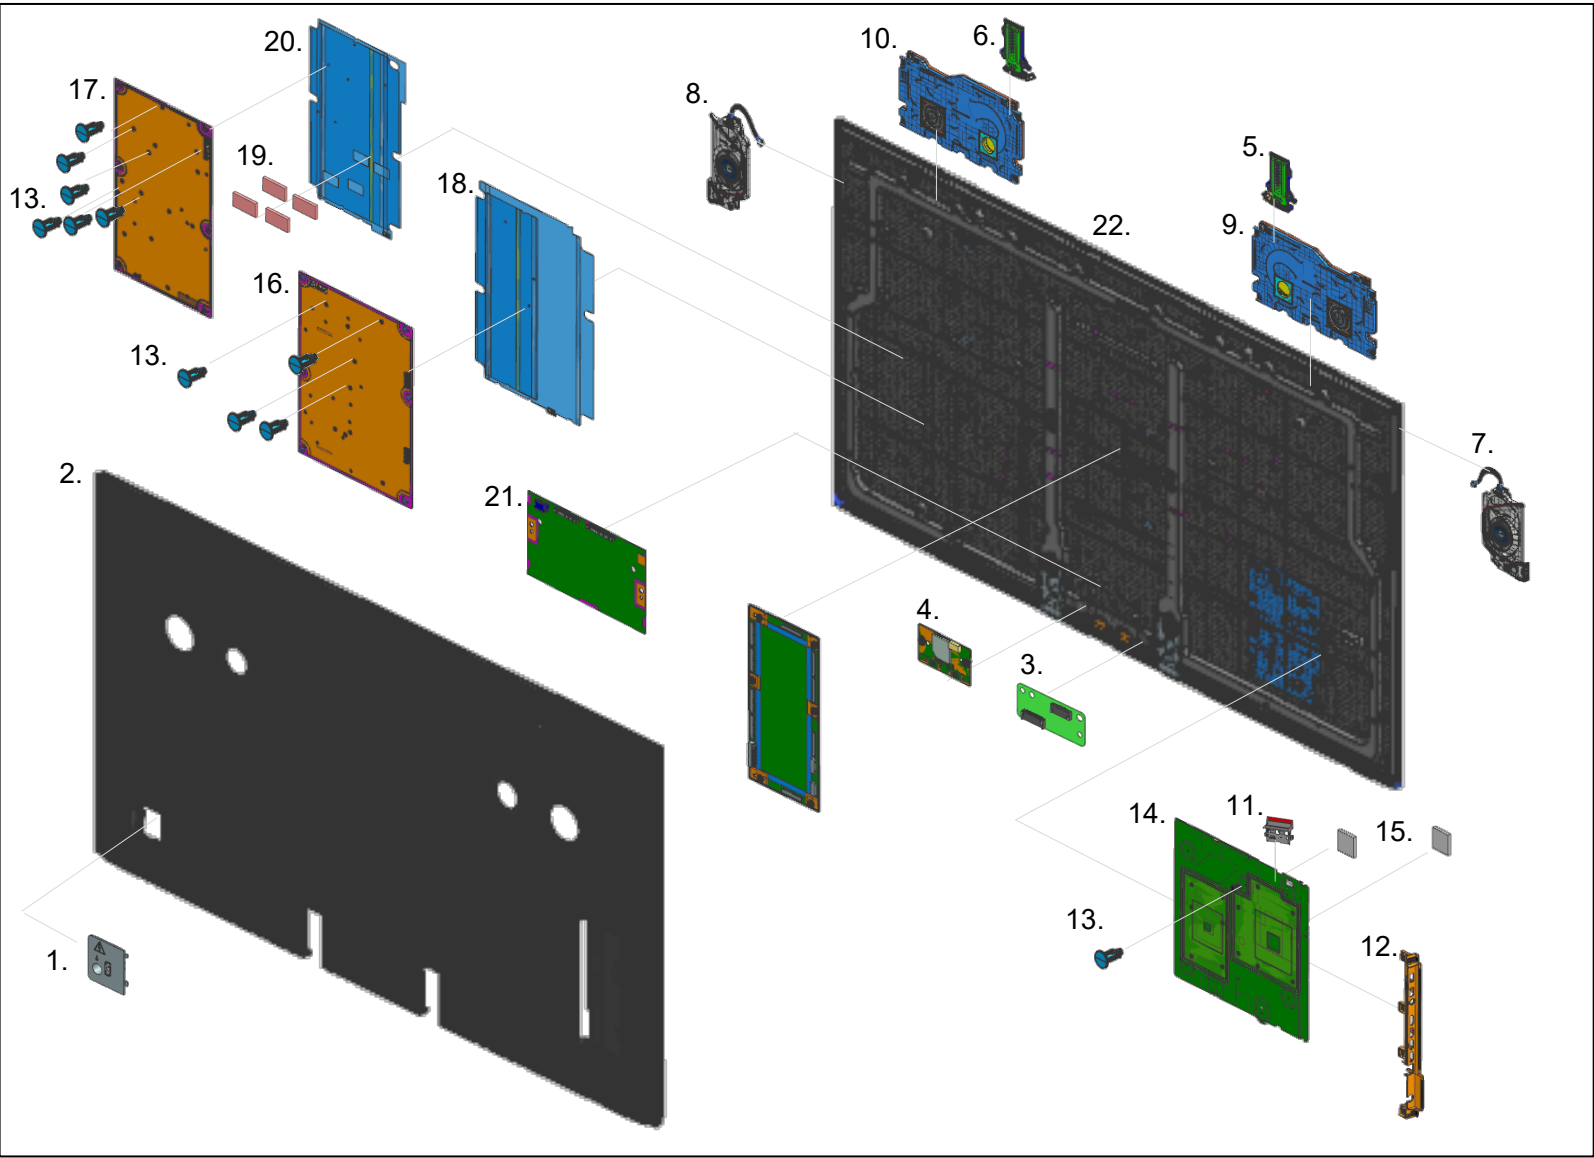



EXPLODED VIEW & PART LIST 85”

SET PART LIST

REF. NO	PART NO.	DESCRIPTION	REMARKS
 14	A-5087-076-A	COMPL SVC BM6LL26 XK EU	Printed Circuit Board incl. capacitors
 16	1-025-469-11	G65 - STATIC CONVERTER(TV)	Internal Power Supply
 17	1-025-468-11	G64 - STATIC CONVERTER(TV)	Internal Power Supply
21	1-025-863-11	MOUNTED PWB E-T-CON (85)	Printed Circuit Board incl. capacitors
 22	A-5084-091-A	P-MOD(YDGO085MUU02)	Liquid Crystal Display



EXPLODED VIEW & PART LIST 85”

OTHER PARTS

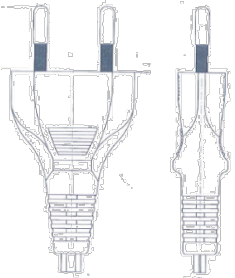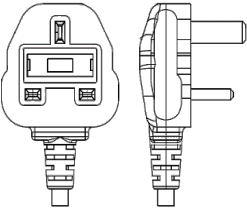REFERENCE	PART NO.	DESCRIPTION	REMARKS
	 1-912-984-41	POWER-SUPPLY CORD (CONN.)	CEI (Cable)
	 1-912-983-51	POWER-SUPPLY CORD (CONN.)	UKA (Cable)

EXPLODED VIEW & PART LIST 85”

CONNECTOR

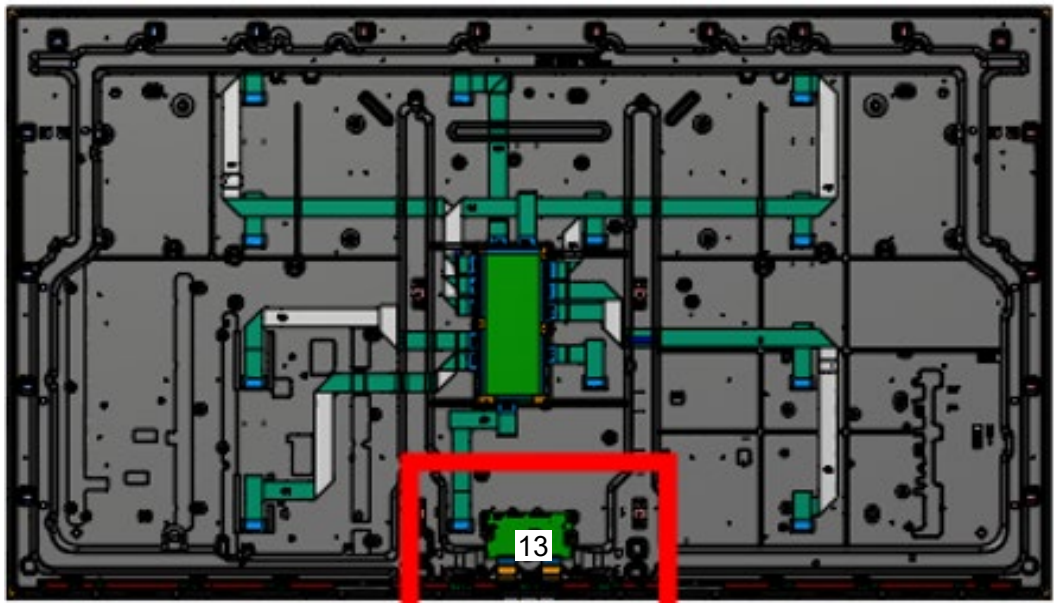
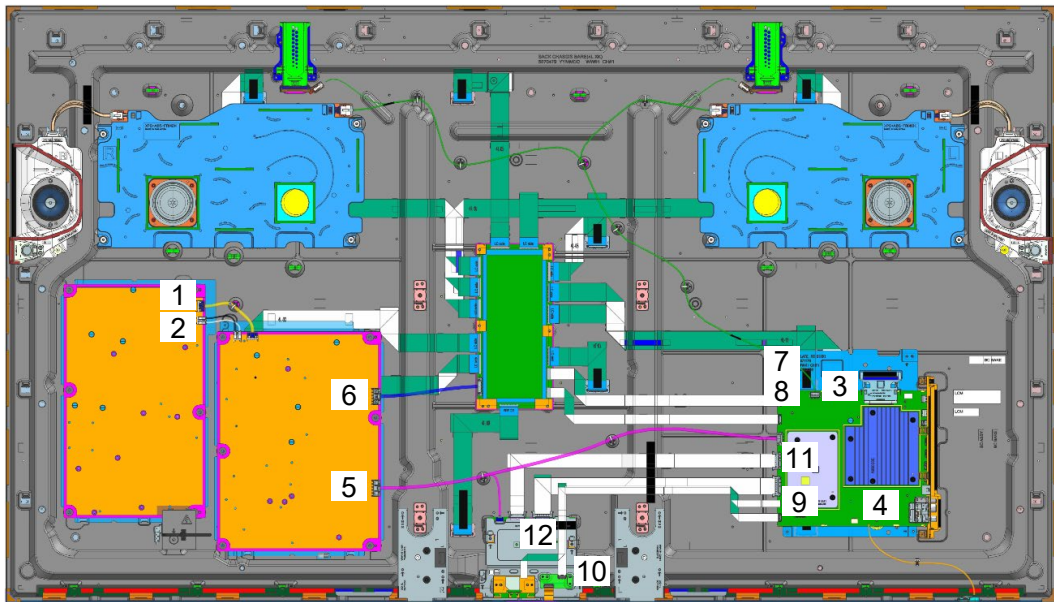


REF. NO	PART NO.	DESCRIPTION	REMARKS
1	1-027-103-11	CONNECTOR ASSY 7P(GG2)	CN6503(G64)-CN6504(G65)(1)
2	1-027-102-11	CONNECTOR ASSY 2P(GG1)	CN6501(G64)-CN6502(G65)(1)
3	1-027-101-11	CONNECTOR ASSY 16P(SP)	CN6411(B)-SP(1)
4	1-027-090-11	CONNECTOR ASSY 4P(SW)	CN6801(B)-SW(1)
5	1-027-098-11	CONNECTOR ASSY 28P(GBT)	CN6401(G)-CN400(B)-TCON(1)
6	1-027-100-11	CONNECTOR ASSY 30P(GL)	CN6601(G)-CN4002(LC)(1)
7	1-027-071-11	FLEXIBLE FLAT CABLE 35P	CN6000(B)-CN4001(LC)(1)
8	1-027-070-11	FLEXIBLE FLAT CABLE 30P	CN6001(B)-CN4000(LC)(1)
9	1-027-064-11	FLEXIBLE FLAT CABLE 20P	CN3804(B)-BT(1)
10	1-027-065-11	FLEXIBLE FLAT CABLE 25P	CN301(H)-CN6800(B)(1)
11	1-027-062-11	FLEXIBLE FLAT CABLE 41P	CN6200(B)-CN301(TCON)(1)
12	1-027-063-11	FLEXIBLE FLAT CABLE 51P	CN6201(B)-CN300(TCON)(1)
13	1-025-866-11	FFC T-CON (85)	SOURCE BOARD-TCON (2)

EXPLODED VIEW & PART LIST 115”

- Place the TV set facing downwards on a stable, level surface before disassembly and assembly of parts.
-  and shaded parts are critical for safety. Replace only with part number specified.
-  Parts contain confidential information. Strictly follow the instruction whenever the components are repaired and/or replaced.


- ☐ (*) Parts are not stocked since they are seldom required for routine service. Some delays should be anticipated when ordering these components.
- ☐ Picture provided in this section might have slight difference from the actual sets.
- ☐ The reference number beside the part indicates the disassembly sequence.
- ☐ Remove screws before disassembly. Unplug connectors before disassembly

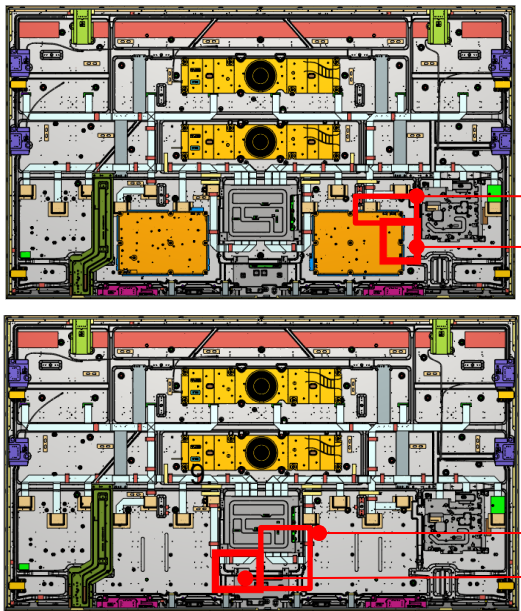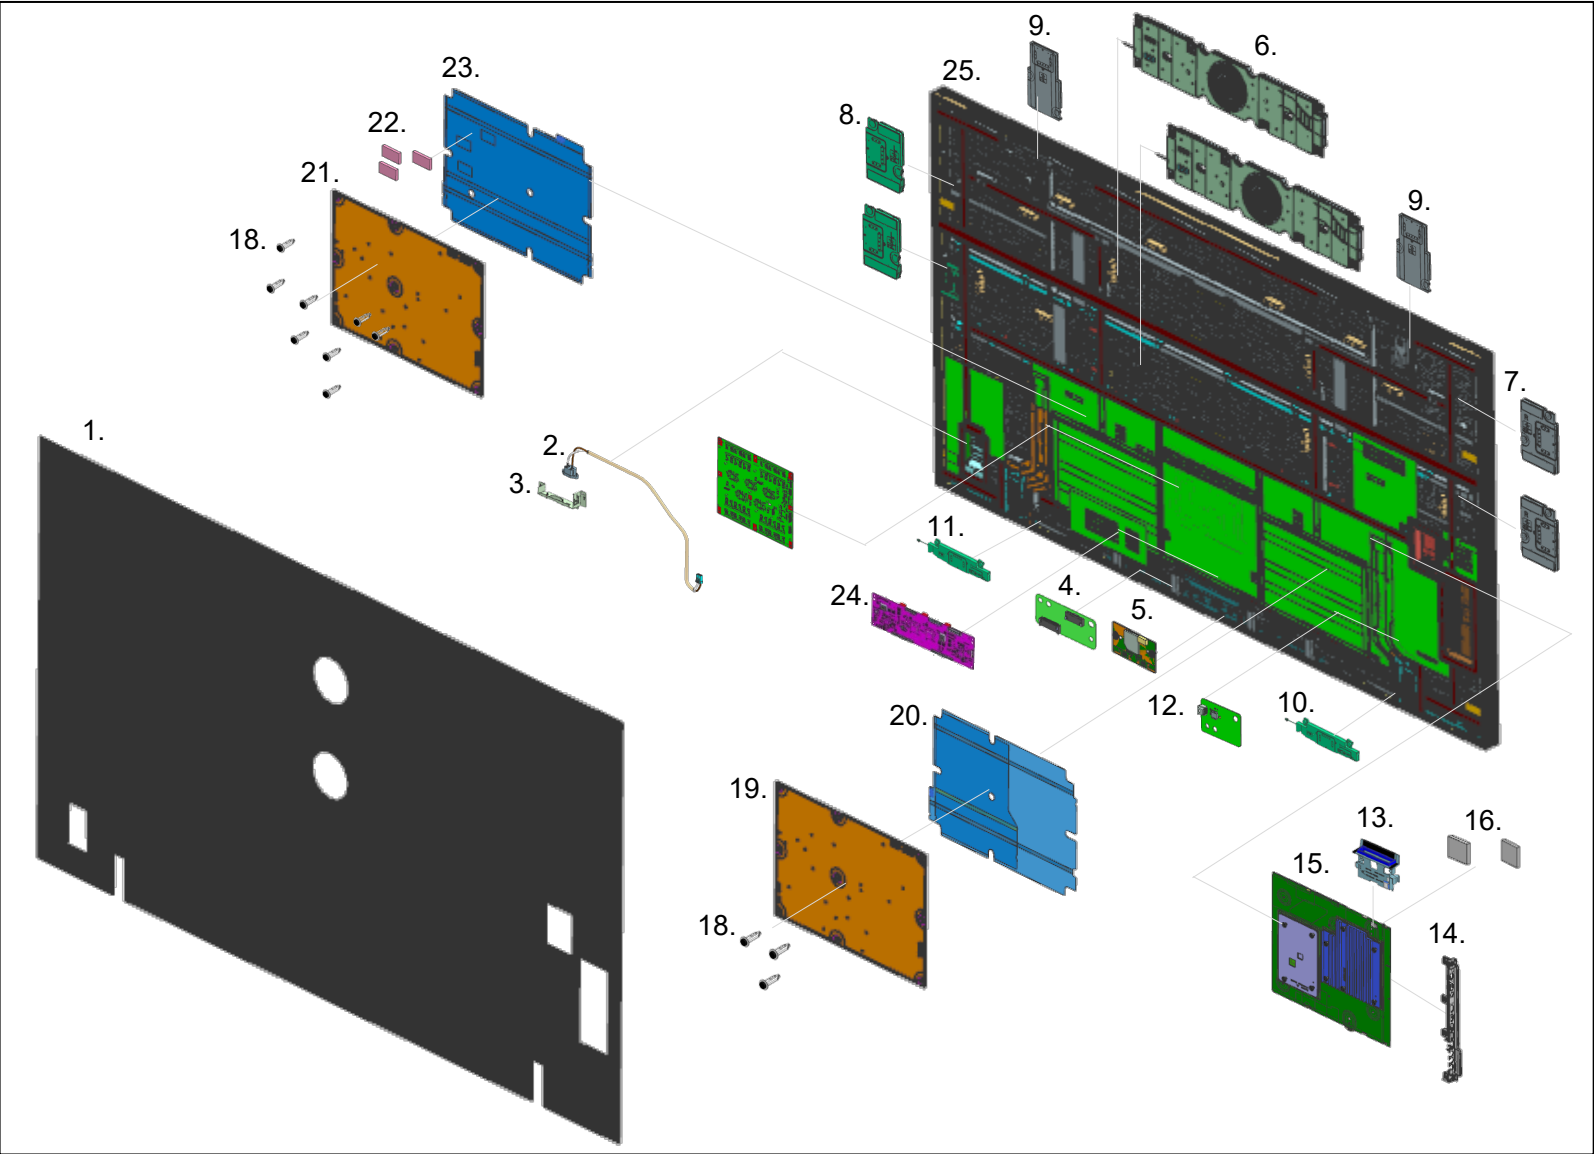

17. Slide Clamp

17. Slide Clamp

Stand

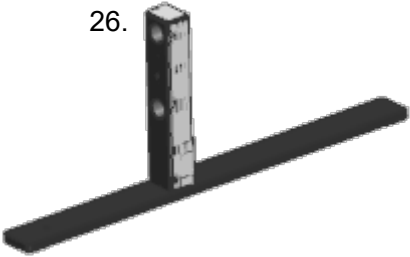



EXPLODED VIEW & PART LIST 115”

SET PART LIST

REF. NO	PART NO.	DESCRIPTION	REMARKS
 15	A-5087-076-A	COMPL SVC BM6LL26 XK EU	Printed Circuit Board incl. capacitors
 19	1-025-474-11	G612 - STATIC CONVERTER(TV)	Internal Power Supply
 21	1-025-473-11	G68 - STATIC CONVERTER(TV)	Internal Power Supply
24	1-027-853-11	MOUNTED PWB E-T-CON (115)	Printed Circuit Board incl. capacitors
 25	A-5092-927-A	LCD PANEL SVC MODULE (M115X80)	Liquid Crystal Display


EXPLODED VIEW & PART LIST 115”

OTHER PARTS

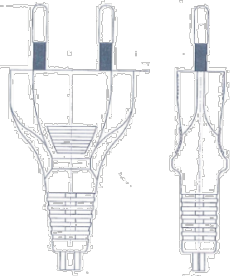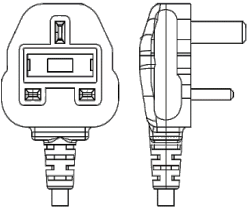REFERENCE	PART NO.	DESCRIPTION	REMARKS
	 1-912-832-11	POWER-SUPPLY CORD SET(EU)	CEI (Cable)
	 1-001-115-12	POWER-SUPPLY CORD SET(UK)	UKA (Cable)

EXPLODED VIEW & PART LIST 115”

CONNECTOR

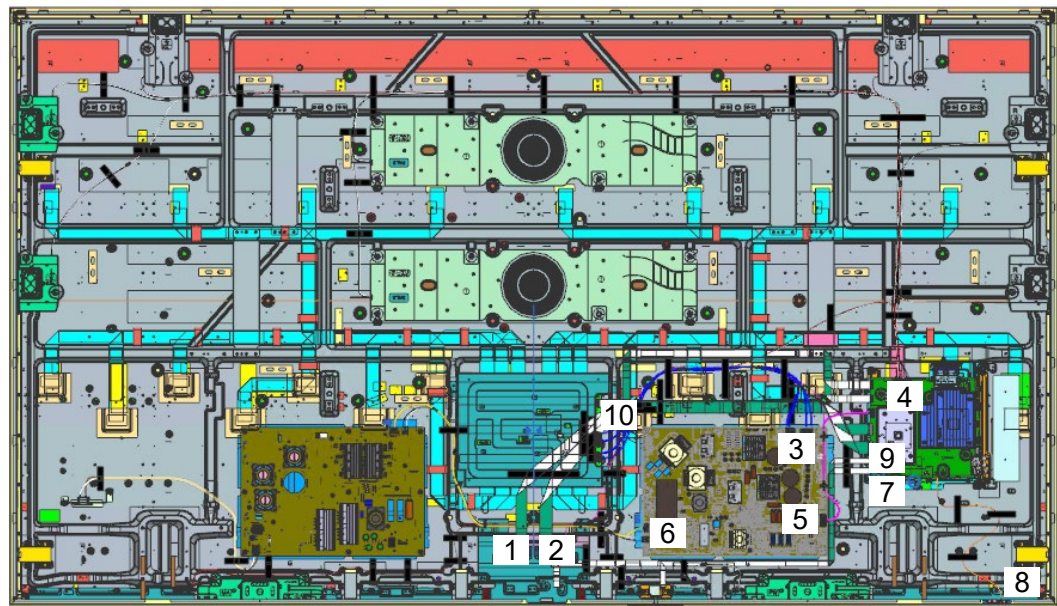

REF. NO	PART NO.	DESCRIPTION	REMARKS
1	1-027-080-11	FLEXIBLE FLAT CABLE 41P	CN6200(B)-J104(TCON)(1)
2	1-027-081-11	FLEXIBLE FLAT CABLE 51P	CN6201(B)-J103(TCON)(1)
3	1-027-111-11	CONNECTOR ASSY 30P(GL)	CN6601(G)-CN6602(G)-CN6003(LC)-CN6002(LC)(1)
4	1-027-113-11	HARNESS ASSY 4P/16P(SP)	CN6411(B)-CN6412(B)-SP(1)
5	1-027-112-11	CONNECTOR ASSY 28P(GBT)	CN6401(G)-CN400(B)-TCON(1)
6	1-027-114-11	HARNESS ASSY 2P/7P(GG1/GG2)	CN6501(G68)-CN6502(G612)-CN6503(G68)-CN6504(G612)(1)(1)
7	1-027-108-11	CONNECTOR ASSY 5P(PID)	CN6203(B)-PID(1)
8	1-027-107-11	CONNECTOR ASSY 4P(SW)	CN6801(B)-SW(1)
9	1-027-078-11	FLEXIBLE FLAT CABLE 20P/25P	CN301(H)-CN6800(B)-CN3804(B)-BT(1)
10	1-027-079-11	FLEXIBLE FLAT CABLE 30P/35P	CN6000(B)-CN6001(LC)-CN6001(B)-CN6000(LC)(1)



SMART CORE & SWITCH MODULE: DISASSEMBLY AND REMOVAL CAUTION

SMART CORE (65" / 75" / 85")

Note: When removing in face-down state, perform the operation with no support beneath the front of the Smart Core.


- 1) Disconnect Wi-Fi board FFC.

Overall View

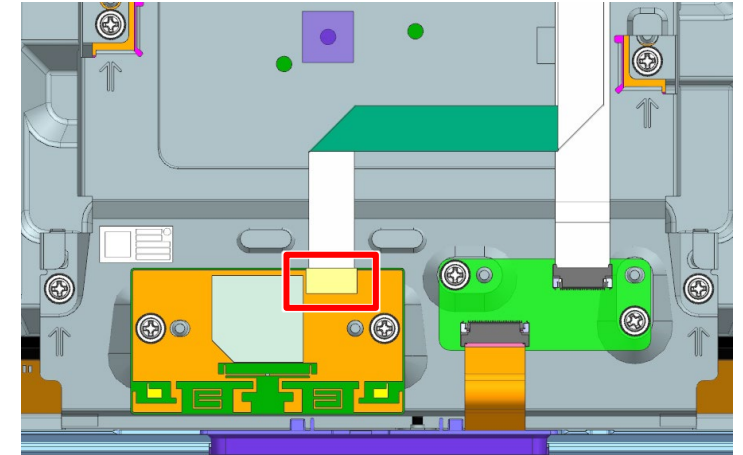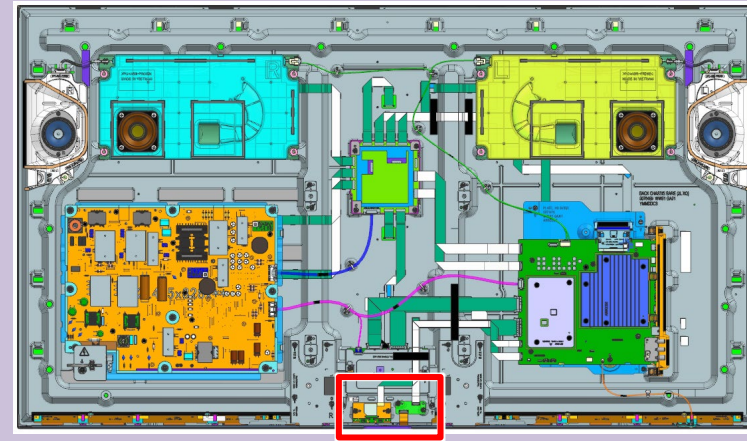

- 2) Remove Wi-Fi board.

○ SCREW, +PSW M3×6.

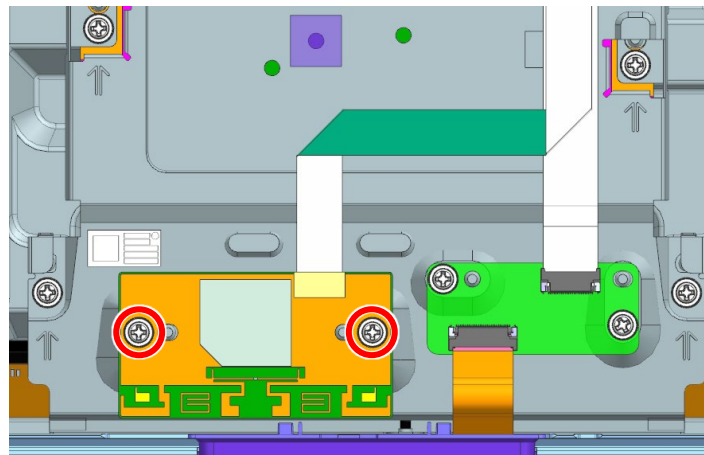


SMART CORE & SWITCH MODULE: DISASSEMBLY AND REMOVAL CAUTION

SMART CORE (65" / 75" / 85")



Note: When removing in face-down state, perform the operation with no support beneath the front of the Smart Core.

- 3) Disconnect FFC from HRLY1 board.

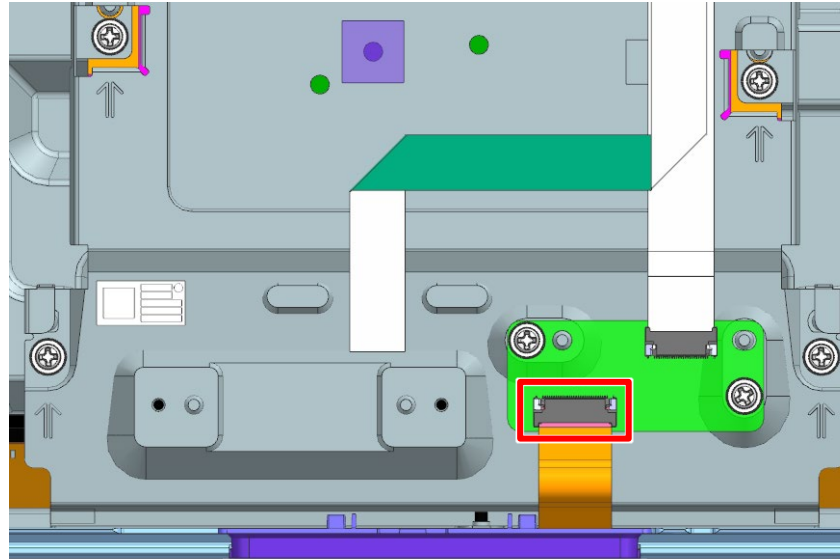

- 4) Remove Smart Core.

 Hook.

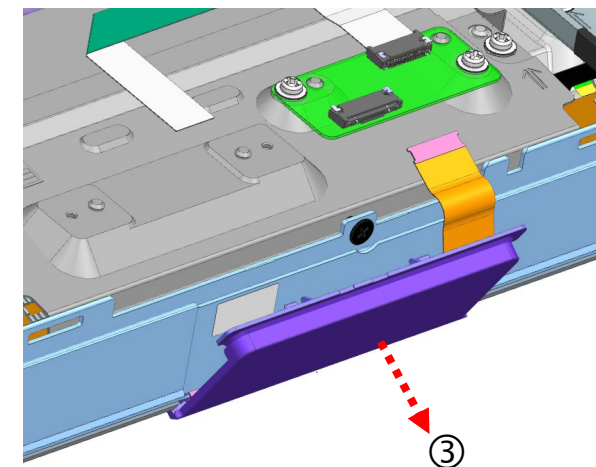
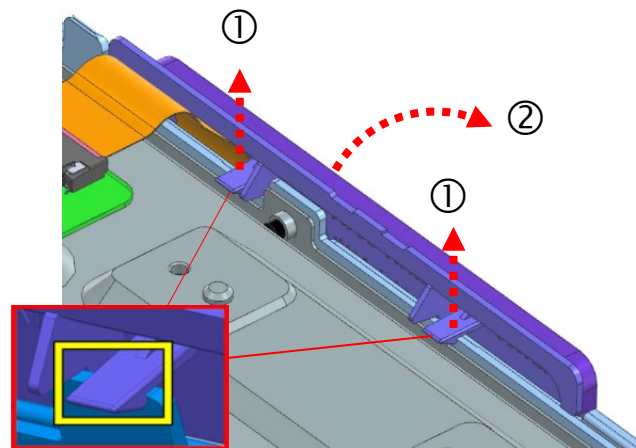


SMART CORE & SWITCH MODULE: DISASSEMBLY AND REMOVAL CAUTION

SMART CORE (65" / 75" / 85")

Note: When removing in face-down state, perform the operation with no support beneath the front of the Smart Core.

5) Remove HFPC1 board.

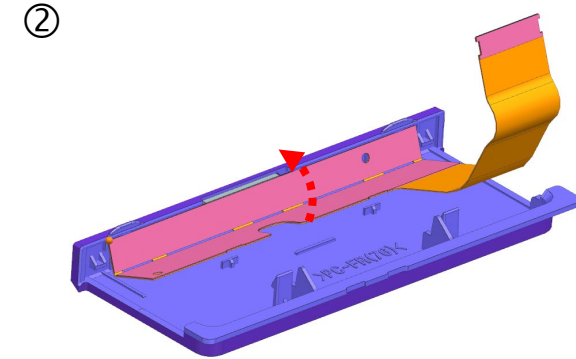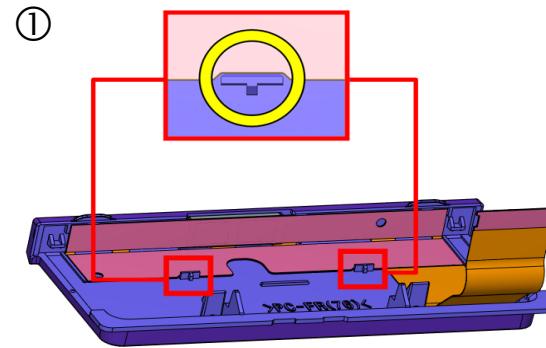

SMART CORE & SWITCH MODULE: DISASSEMBLY AND REMOVAL CAUTION




SMART CORE (115")

Note: When removing in stand-up state, use a screwdriver with a total length of 65 mm or less.

- 1) Remove Smart Core cover.

○ SCREW, +F M2.5×2.5.

Overall View

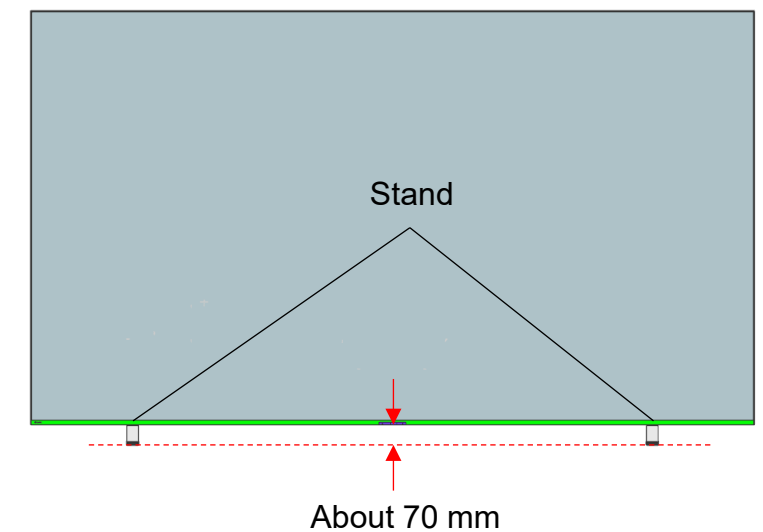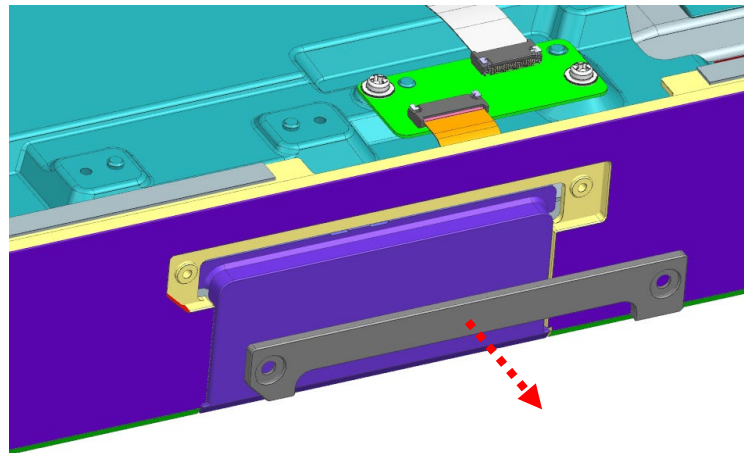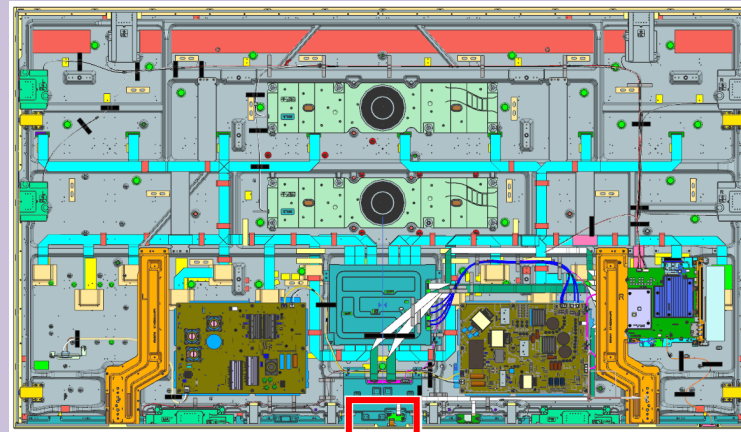


SMART CORE & SWITCH MODULE: DISASSEMBLY AND REMOVAL CAUTION


SMART CORE (115")

Note: When removing in stand-up state, use a screwdriver with a total length of 65 mm or less.

2) Disconnect FFC from HRLY1 board.

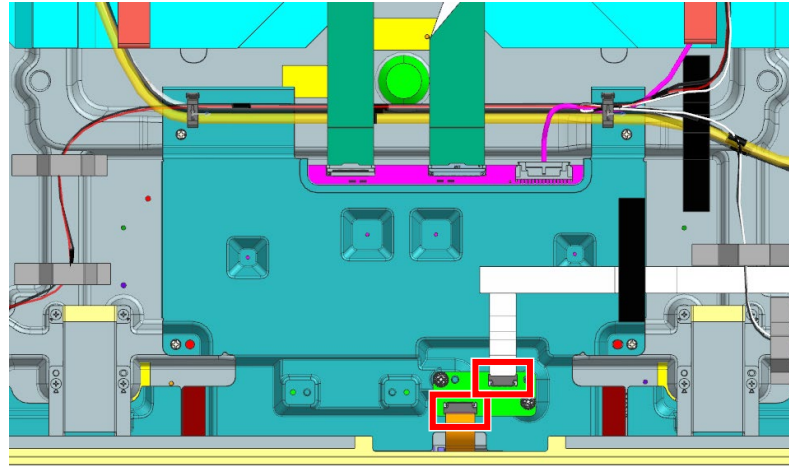

3) Remove tape.

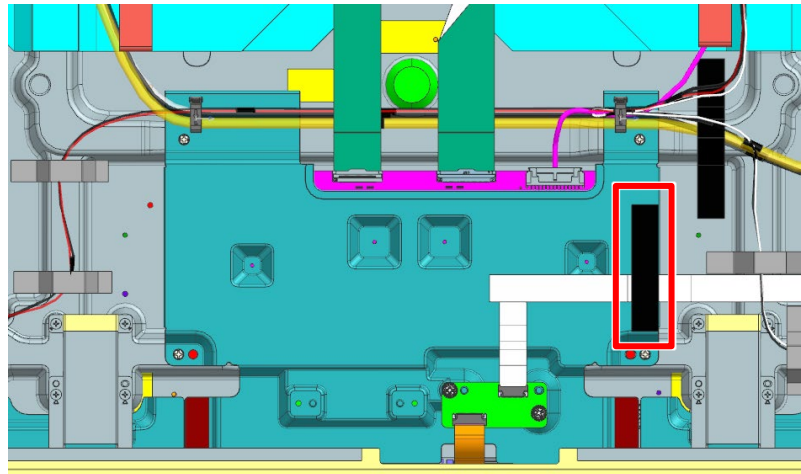


SMART CORE & SWITCH MODULE: DISASSEMBLY AND REMOVAL CAUTION



SMART CORE (115")

Note: When removing in stand-up state, use a screwdriver with a total length of 65 mm or less.

- 4) Open clammer and pull out the wire.

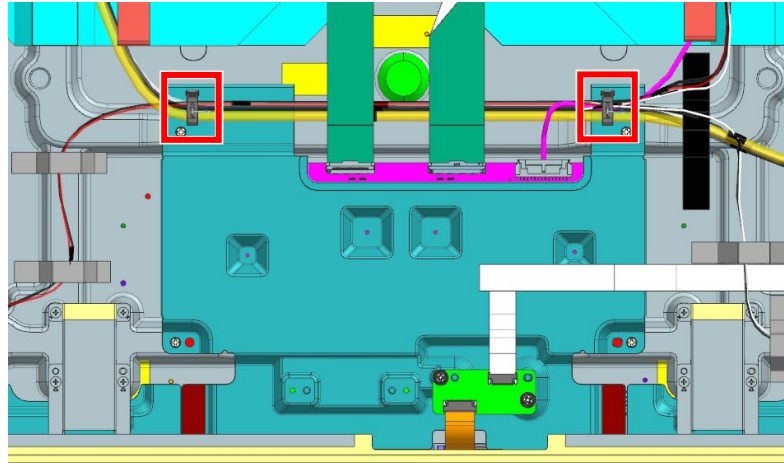

- 5) Remove T-Con shield.

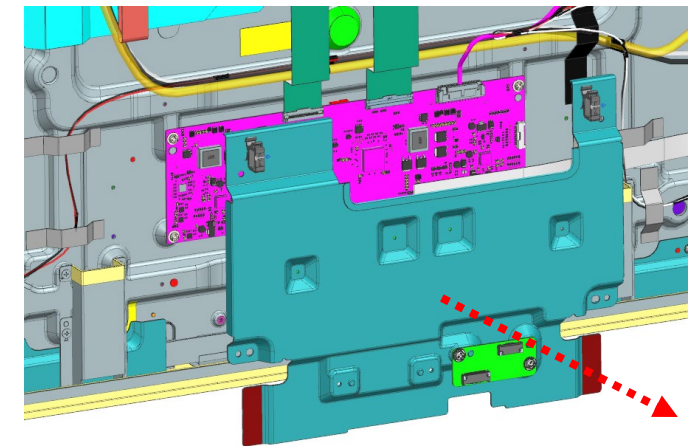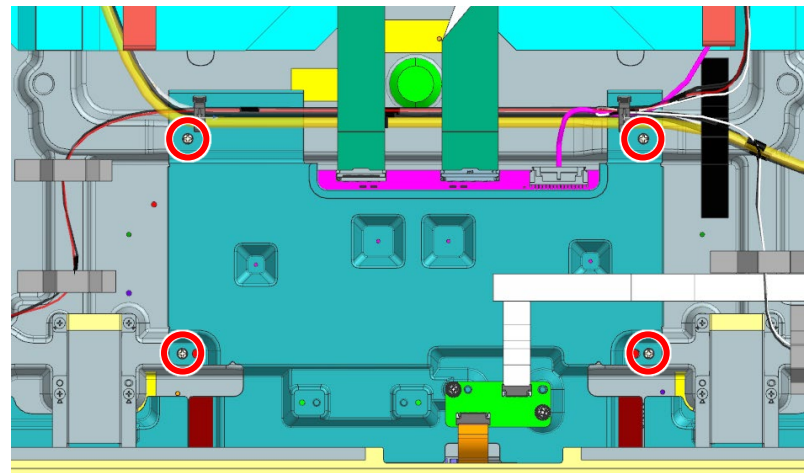



SMART CORE & SWITCH MODULE: DISASSEMBLY AND REMOVAL CAUTION

Note: When removing in face-down state, perform the operation with no support beneath the front of the Smart Core.



SMART CORE (115")

6) Remove Smart Core.

 Hook.

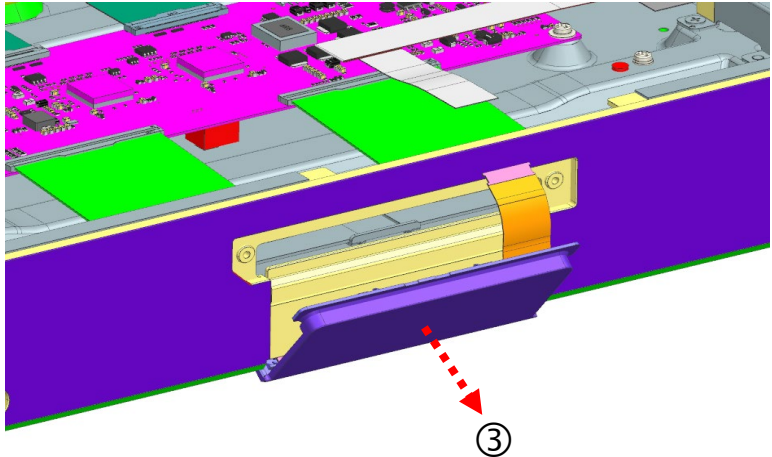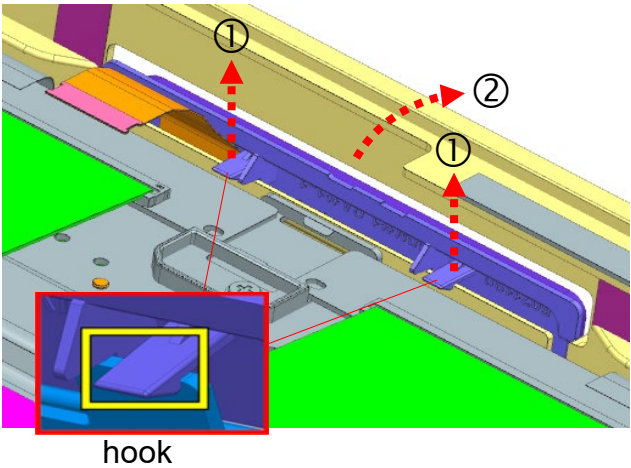

7) Remove HFPC1.

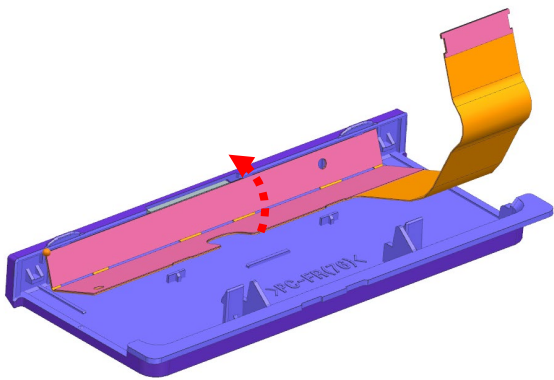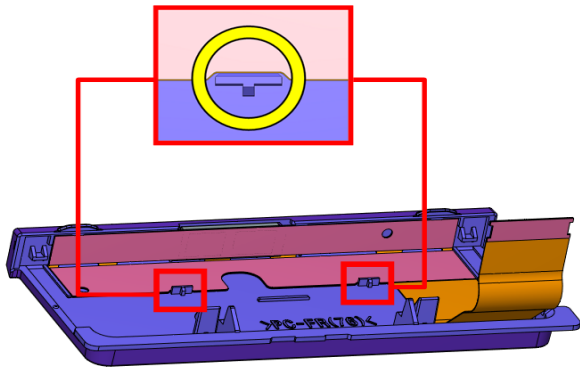


SMART CORE & SWITCH MODULE: DISASSEMBLY AND REMOVAL CAUTION


SWITCH MODULE (65" / 75" / 85")

Bracket Switch Position.


65"

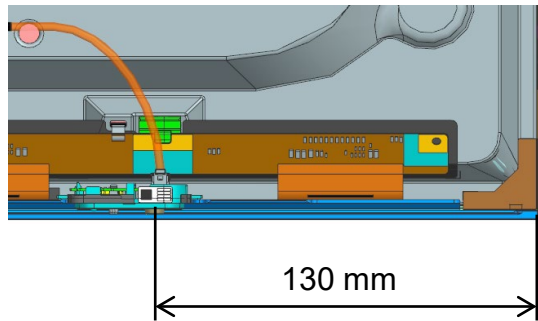

75"

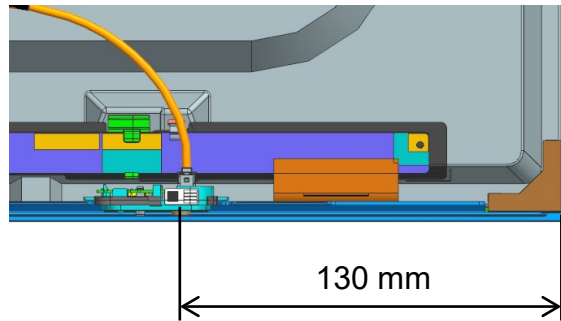


85"

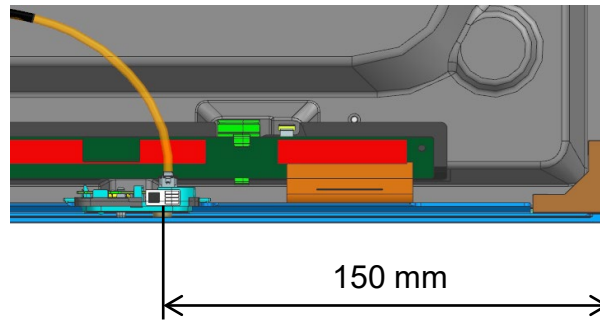

Overall View

Example: XQ 65"

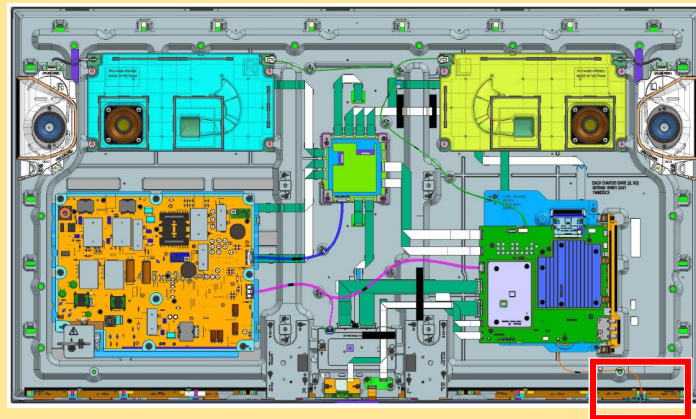


SMART CORE & SWITCH MODULE: DISASSEMBLY AND REMOVAL CAUTION

SWITCH MODULE (65" / 75" / 85")


1) Remove Bracket Switch.

① Pull straight up.

② Removed from bottom Bezel.

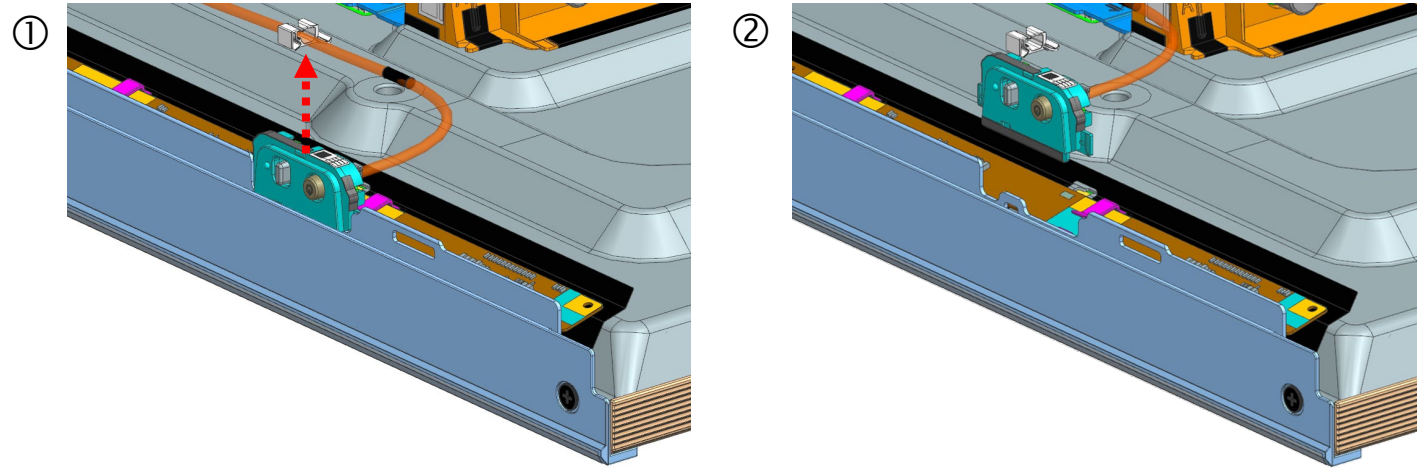

2) Disconnect SWITCH MODULE harness.

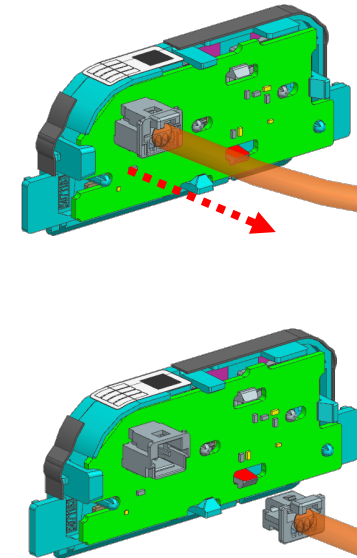


SMART CORE & SWITCH MODULE: DISASSEMBLY AND REMOVAL CAUTION


SWITCH MODULE (115")

Bracket Switch Position.

115"

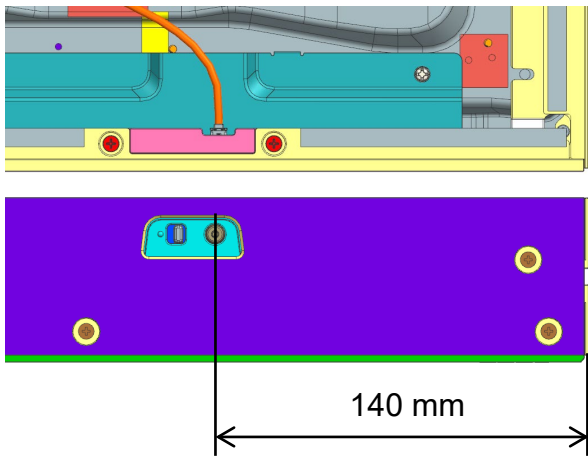


Overall View

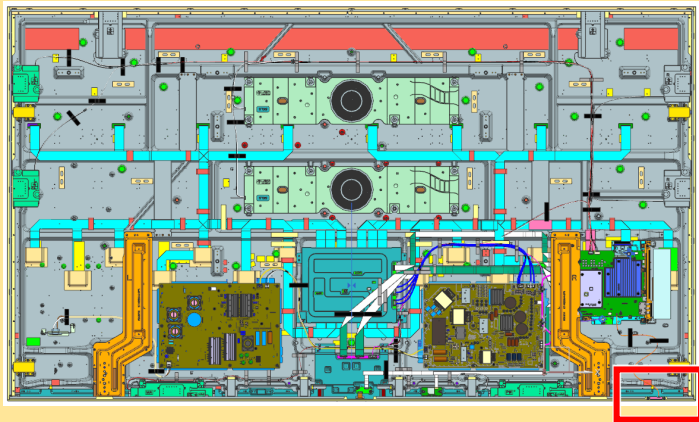

SMART CORE & SWITCH MODULE: DISASSEMBLY AND REMOVAL CAUTION

SWITCH MODULE (115")


- 1) Disconnect SWITCH MODULE harness.

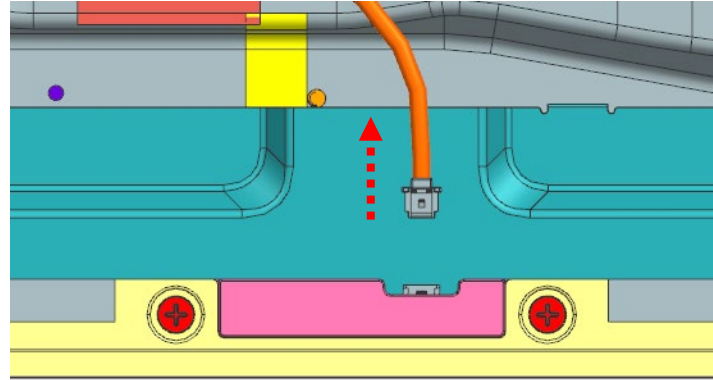


- 2) Remove Bracket SWITCH MODULE holder.

○ SCREW, +F M2.5×2.5

①

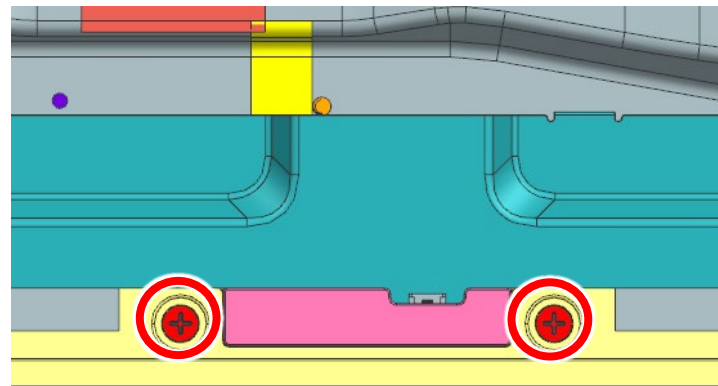

②

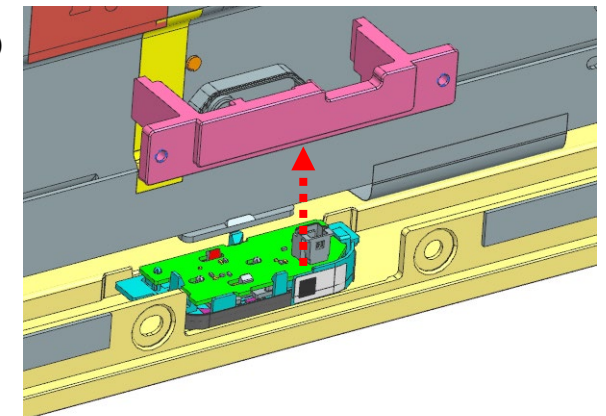


SMART CORE & SWITCH MODULE: DISASSEMBLY AND REMOVAL CAUTION

SWITCH MODULE (115")

3) Remove Bracket Switch.


① Pull diagonally upwards.

⚠ DO NOT touch the Bracket Switch to the Bezel.

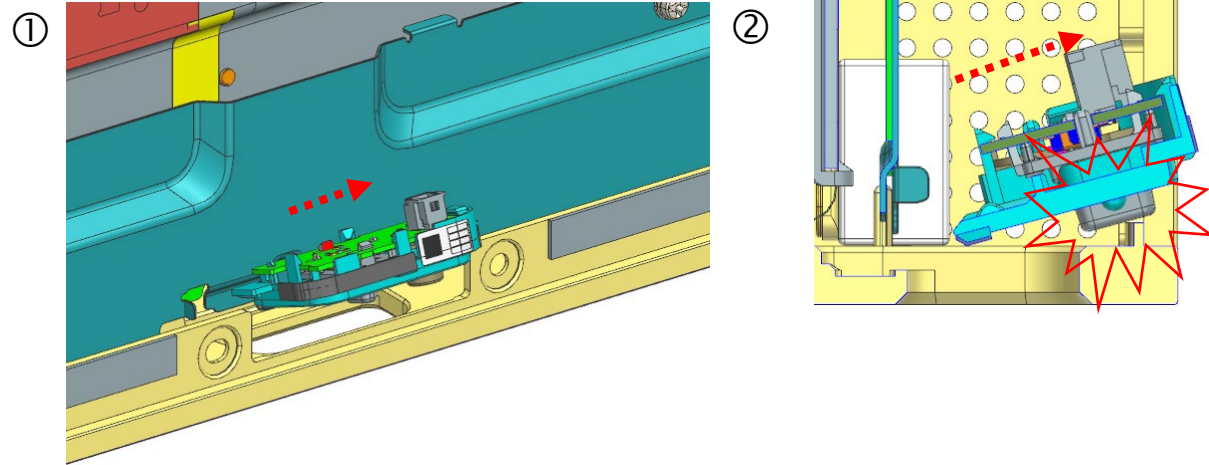


SMART CORE & SWITCH MODULE: EXPLODED VIEW & PART LIST

SMART CORE

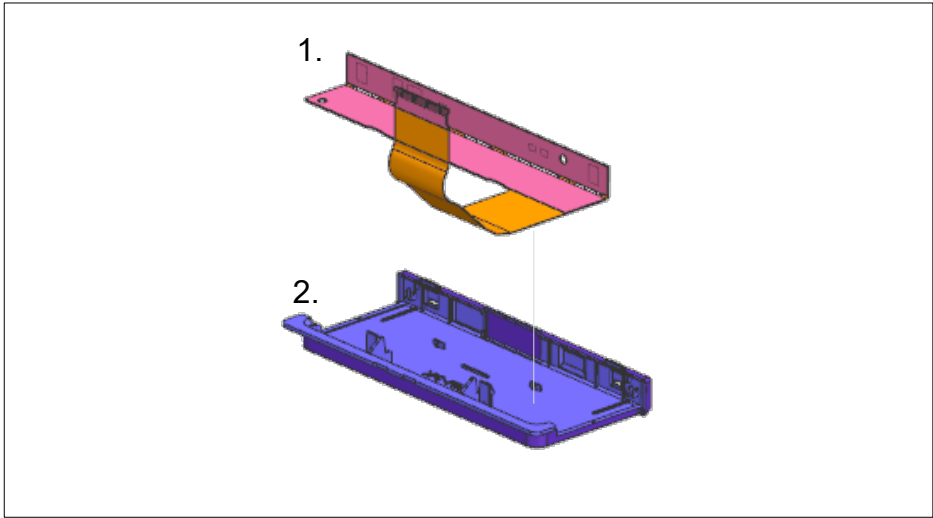

REF. NO	PART NO.	DESCRIPTION	REMARKS
1	A-5087-125-A	COMPL SVC HFPC1 JPWW BM10 SOEM	-
2	5-072-223-01	ORNAMENT SC (XQ) A	-

SWITCH MODULE

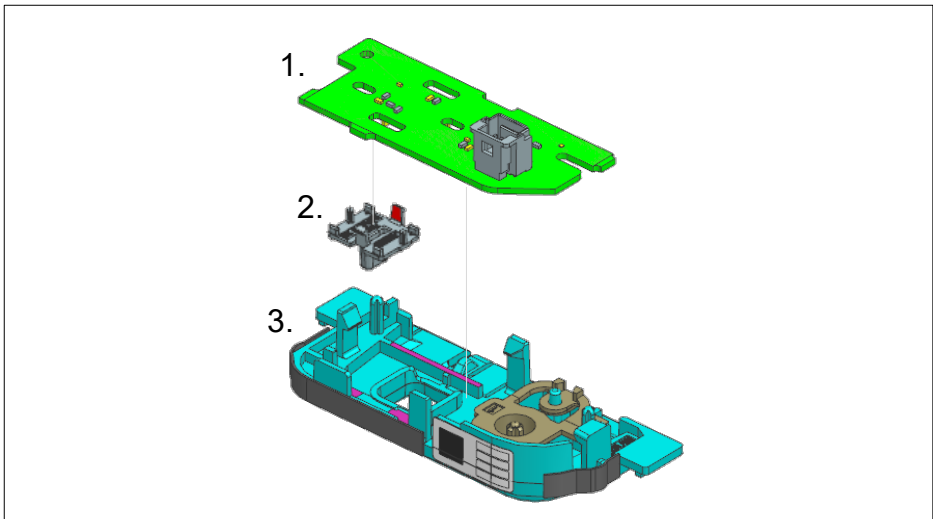


REF. NO	PART NO.	DESCRIPTION	REMARKS
1	A-5087-135-A	COMPL SVC SW1 JPWW BM11 SOEM	-
2	5-071-185-01	SLIDE MIC SW (XQ)	-
3	5-073-584-01	BRACKET SWITCH (XQ)	-


APPENDIX

INSULATION SHEET REMOVAL CAUTION (85")

85"

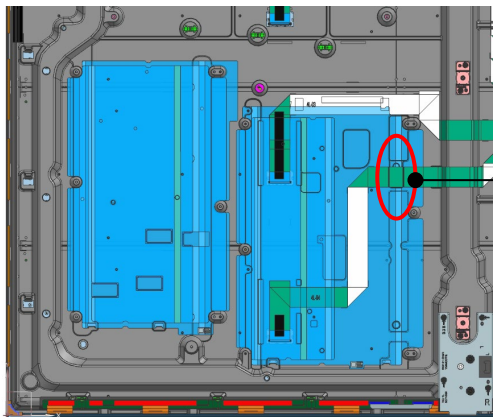

Since the double-sided tape of the insulation sheet is stuck to the FFC, please peel it off slowly to protect the FFC.

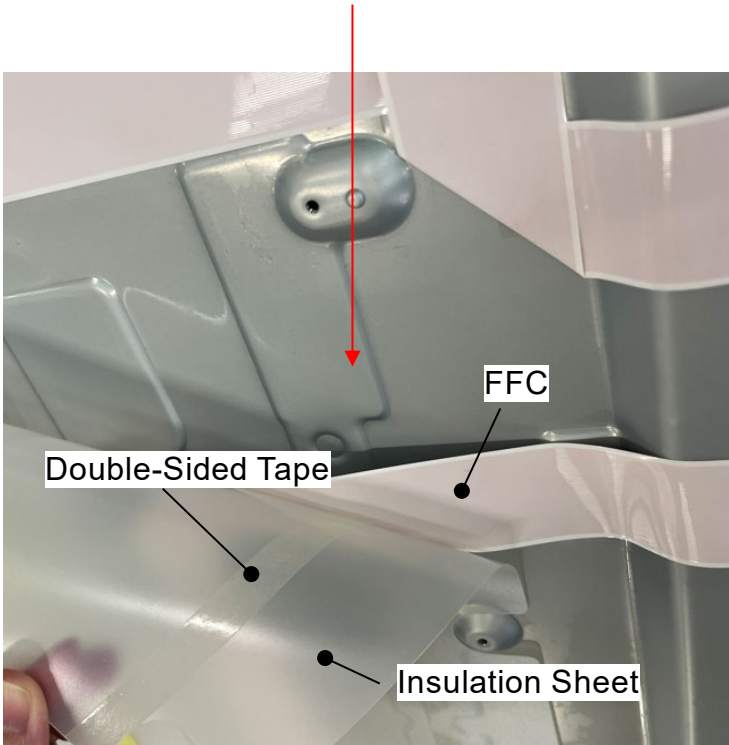

After removing the insulation sheet from the FFC, the FFC may bend slightly, but there is no issue with quality.

