 
 




K-100XR36M2 / 100XR35M2 / 85XR36M2 / 85XR35M2 / 75XR36M2
K-75XR35M2 / 75XR31M2 / 75XR30M2 / 65XR36M2 / 65XR35M2
K-65XR31M2 / 65XR30M2 / 55XR36M2 / 55XR35M2 / 55XR31M2
K-55XR30M2

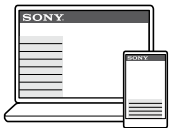


https://rd1.sony.net/help/tv/nga2/h_ga/

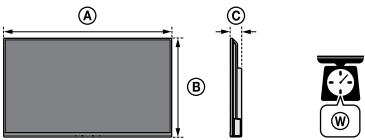


	(mm)*1			(kg)*1
	A	B	C	W
K-100XR36M2 / 100XR35M2	2 230	1 284	75	53.0
K-85XR36M2 / 85XR35M2	1 892	1 092	74	35.7
K-75XR36M2 / 75XR35M2 / 75XR31M2 / 75XR30M2	1 670	967	72	31.2
K-65XR36M2 / 65XR35M2 / 65XR31M2 / 65XR30M2	1 447	841	70	20.8
K-55XR36M2 / 55XR35M2 / 55XR31M2 / 55XR30M2	1 225	717	70	13.3

 *1 (Approx.)


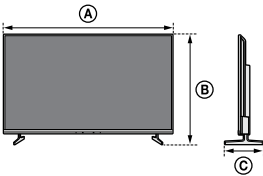


	(mm)*1			(kg)*1
	A	B	C	W
K-100XR36M2 / 100XR35M2	2 230	1 347	494	54.6
K-85XR36M2 / 85XR35M2	1 892	1 155	450	37.2
K-75XR36M2 / 75XR35M2 / 75XR31M2 / 75XR30M2	1 670	1 030	349	32.3
K-65XR36M2 / 65XR35M2 / 65XR31M2 / 65XR30M2	1 447	904	290	21.2
K-55XR36M2 / 55XR35M2 / 55XR31M2 / 55XR30M2	1 225	780	262	13.7

 *1 (Approx.)

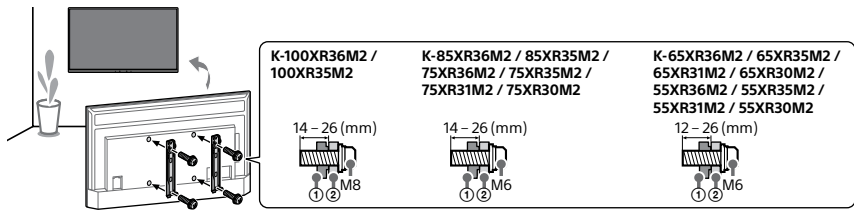

① TV's rear cover ② Wall-Mount Bracket

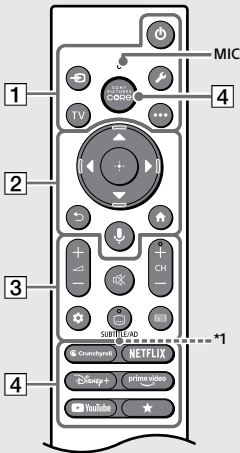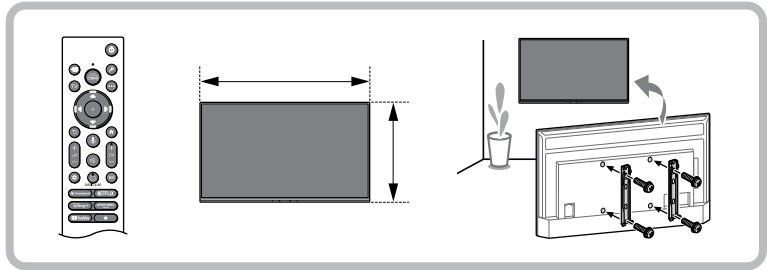  

The remote control shape, layout, availability and function of remote control buttons may vary depending on your region/country/TV model/TV settings.

- 1 **⏻ (Power)**
- **(Input select)**: Display and select the input source, etc.
- **(Quick Settings)**: Display Quick Settings.
- **TV**: Display TV channel list or switch to input.
- **⋮ (More options)**: Display additional features or settings based on current content or input.
- 2 **⏮ / ⏪ / ⏩ / ⏭**: On screen menu navigation and selection.
⏮ (Back)
🏠 (Home)
🗣 (Voice Assistant / Microphone): Use Voice Assistant*2*3 or voice search*3.
- 3 **🔊 + / - (Volume)**
🔊 (Mute)*4
CH + / - (Channel)
⚙ (Dashboard): Display Dashboard.
📄 (Subtitle/Closed Caption/Audio Description)*5
- 4 **📖 (Guide)**: Display the digital programme guide of TV or TV box*6.

4 App buttons

- *1 The buzzer will emit a sound when you use the remote control finder function. Refer to the online Help Guide for details.
- *2 Only for limited region/country/model/language.
- *3 Voice Assistant or voice search requires an Internet connection.
- *4 Accessibility shortcut is available by pressing and holding 🔊 (Mute).
- *5 In Accessibility settings, the button function can be changed to switch audio.
- *6 [TV box setup] setting is required.

About Manuals

Please retain the manuals for future reference.

Paper manual

Setup Guide (on top of the product) / Reference Guide (this manual) / Safety and Other Information.

Help Guide (On screen Manual)

- To open it, select [Settings] → [Help and feedback] → [Help] or select [Help] in the Home Menu.
- You can refer to the Help Guide with your smartphone (visit website provided on the front cover of Reference Guide).

Read and understand the contents of this manual before operating this product.

Note

- Instructions about "Installing the TV to the Wall" are included within this TV's instruction manual.
- Read the supplied safety documentation for additional safety information.
- Images and illustrations used in the supplied manuals are for reference and may differ from the actual product.
- Setting menus are subject to change without notice due to software updates. For latest information, visit Sony support website.

IMPORTANT - Read the End User Software Licence Agreement before using your Sony product. Using your product indicates your acceptance of the End User Software Licence Agreement. The software licence agreement between you and Sony is available online at Sony website (<https://www.sony.net/tv-software-licences4/>) or on your product screen. Press  (Quick Settings) on the remote control and select [Settings] → [System] → [About] → [Legal information] → [Notices and licences].

Location of the identification label

Labels for the TV Model No. and Power Supply rating are located on the rear of the TV.

Installing the TV to the Wall

Using the optional Wall-Mount Bracket (not supplied)

This TV's instruction manual only provides the steps to prepare the TV for Wall-Mount installation before it is installed on the wall.

Your TV can be mounted to a wall using a suitable Wall-Mount Bracket (not supplied). If the Table-Top Stand is attached to the TV, the TV may require detaching the Table-Top Stand (models with Table-Top Stand only). Prepare the TV for the Wall-Mount Bracket before making cable connections.

For product protection and safety reasons, Sony strongly recommends that installation of your TV on the wall be performed by qualified professionals. Do not attempt to install it yourself.

 
- Follow the instruction guide provided with the Wall-Mount Bracket for your model. Sufficient expertise is required in installing this TV, especially to determine the strength of the wall for withstanding the TV's weight.
- The screws for installing the Wall-Mount Bracket to the TV are not supplied.
- Be sure to store the unused screws and Table-Top Stand in a safe place until you are ready to attach the Table-Top Stand (models with Table-Top Stand only). Keep the screws away from children.

Note


- Read the supplied safety documentation for additional safety information.

- Remove the screws from the rear of the TV.

Models with Table-Top Stand only

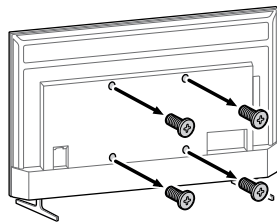


Except models with Table-Top Stand

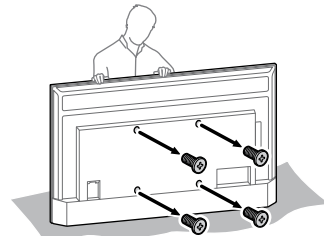 

- Attach the Wall-Mount Bracket (not supplied) using the screws (not supplied).

Models with Table-Top Stand only

 
Wall-Mount Bracket (not supplied)

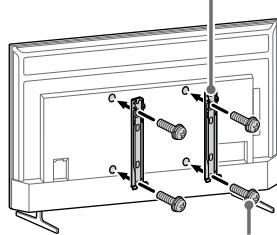

Screw (not supplied)

Except models with Table-Top Stand

 Wall-Mount Bracket (not supplied)

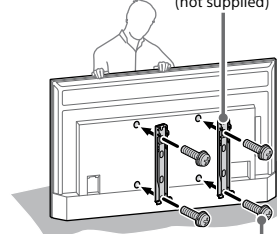


Screw (not supplied)

Note

- If using an electric screwdriver, set the torque at approximately 1.5 N·m [15 kgf·cm].
- Be sure to fasten the Wall-Mount Attachment when attaching them to the TV. Use only a flat head screwdriver to install the Wall-Mount Attachment. Use of another tool might result in over torquing the Wall-Mount Attachment and damaging the TV.
- Be sure the TV is vertical before turning on. To avoid uneven picture uniformity do not power on the TV with the panel facing down.

Detaching the Table-Top Stand from the TV

 To detach the Table-Top Stand from the TV, remove the screws .

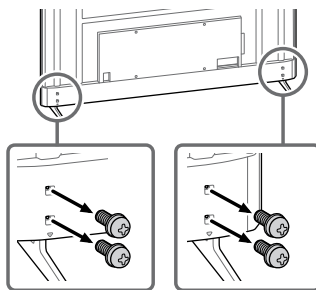

Note

- Be careful when lifting the TV as the Table-Top Stand is detached, the Table-Top Stand may topple over and cause personal injury.
- Take care when removing the Table-Top Stand from the TV to prevent it from falling over and damaging the surface that the TV is sitting on.
- Do not remove the Table-Top Stand for any reason other than to install corresponding accessories on the TV.
- Be sure the TV is vertical before turning on. To avoid uneven picture uniformity do not power on the TV with the panel facing down.
- When attaching the Table-Top Stand again, be sure to fasten the screws (previously removed) to the original holes on the rear of the TV.

Troubleshooting

General troubleshooting for issues like: black screen, no sound, frozen picture, TV does not respond, or network is lost, do the following steps.

- Restart your TV by pressing the power button on the remote control for about five seconds. Select [Restart] and TV will restart. If the TV does not recover, try unplugging the AC power cord (mains lead) then press the power button on the TV and release it. Wait for two minutes, and plug in the AC power cord (mains lead). Or, press the power button on the TV for about 40 seconds until the TV turns off.
- Refer to the Help menu shown below.
- Connect your TV to the Internet and perform a software update. Sony recommends you to keep your TV software updated. Software updates provide new features and performance improvements.
- Visit Sony support website (information provided at the end of the supplied safety documentation).

When you plug in the TV, the TV may not be able to turn on for a while even if you press the power button on the remote control or the TV.

It takes time to initialize the system. Wait for about one minute, then operate it again.

The remote control does not function.

- Replace the batteries.

The parental lock password has been forgotten.

- Enter 4357 for the PIN and enter the new PIN.



For more information, refer to the Help Guide.
To open it, select [Settings] → [Help and feedback] → [Help] or select [Help] in the Home Menu.

Specifications

System

Panel system
LCD (Liquid Crystal Display) Panel, LED Backlight
TV system
Analogue: B/G
Digital: DVB-T/DVB-T2
Satellite: DVB-S/DVB-S2
Colour system
PAL/SECAM
Channel coverage
Analogue: UHF/VHF/Cable
Digital: UHF/VHF
Satellite: Intermediate Frequency 950-2 150 MHz
Sound output (W)
20
Wireless technology
Protocol IEEE 802.11a/b/g/n/ac/ax
Bluetooth® Version 5.3

Input/Output jacks

Antenna (aerial)/cable
75 ohm external terminal for RF input
Satellite antenna
Female F Type Connector, 75 ohm
LNB 13 V/18 V & 22 kHz tone
HDMI IN 1/2/3/4 (HDMI IN 3 eARC/ARC)
HDMI IN 1, 2, 3 and 4 support 120 Hz
DIGITAL AUDIO OUT (OPTICAL)
Two channel linear PCM: 48 kHz 16 bits, Dolby Audio, DTS
USB 1/2
USB 1 (USB 3.0, 900 mA), USB 2 (USB 2.0, 500 mA)
LAN (10BASE-T/100BASE-TX)

Power and others

Power requirements
110 V – 240 V AC, 50/60 Hz
Screen size (measured diagonally) (Approx.) (inches/cm)
K-100XR36M2 / 100XR35M2: 100 / 252.8
K-85XR36M2 / 85XR35M2: 85 / 214.8
K-75XR36M2 / 75XR35M2 / 75XR31M2 / 75XR30M2: 75 / 189.3
K-65XR36M2 / 65XR35M2 / 65XR31M2 / 65XR30M2: 65 / 163.9
K-55XR36M2 / 55XR35M2 / 55XR31M2 / 55XR30M2: 55 / 138.8
Power consumption
Indicated on the rear of the TV
Standby power consumption^{*1*2} (W)
0.5
Display resolution (horizontal × vertical) (pixels)
3 840 × 2 160
Output rating
900 mA (for USB 1), 500 mA (for USB 2)

Others

- Operating temperature
0 °C – 45 °C
- *1 Specified standby power is reached after the TV finishes necessary internal processes.
- *2 Standby power consumption will increase when your TV is connected to the network.

Note

- Optional accessories availability depends on countries/region/TV model/stock.
- Design and specifications are subject to change without notice.
- Subscriptions for services and applications may be required and additional terms, conditions and/or charges may apply when using Voice Assistant.
- Power consumption will increase when the built-in MIC is enabled as it is always listening.
- Visit Sony website for more information on product specifications.

Trademark Information

- Dolby, Dolby Vision, Dolby Atmos, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 1992-2024 Dolby Laboratories. All rights reserved.
- Manufactured under license from DTS, Inc. and/or its affiliates. For patents, see <https://xperi.com/dts-patents/>. DTS, the DTS logo, DTS:X, the DTS:X logo, Virtual:X, and the DTS Virtual:X logo are trademarks or registered trademarks of DTS, Inc. and/or its affiliates in the U.S. and/or other countries. © DTS, Inc. and/or its affiliates. All rights reserved.
- TUXERA is a registered trademark of Tuxera Inc. in the US and other countries.

 **Dolby**
VISION · ATMOS

 **dts** X

 **TUXERA**